


Mountain Top Roll
Installation Instructions

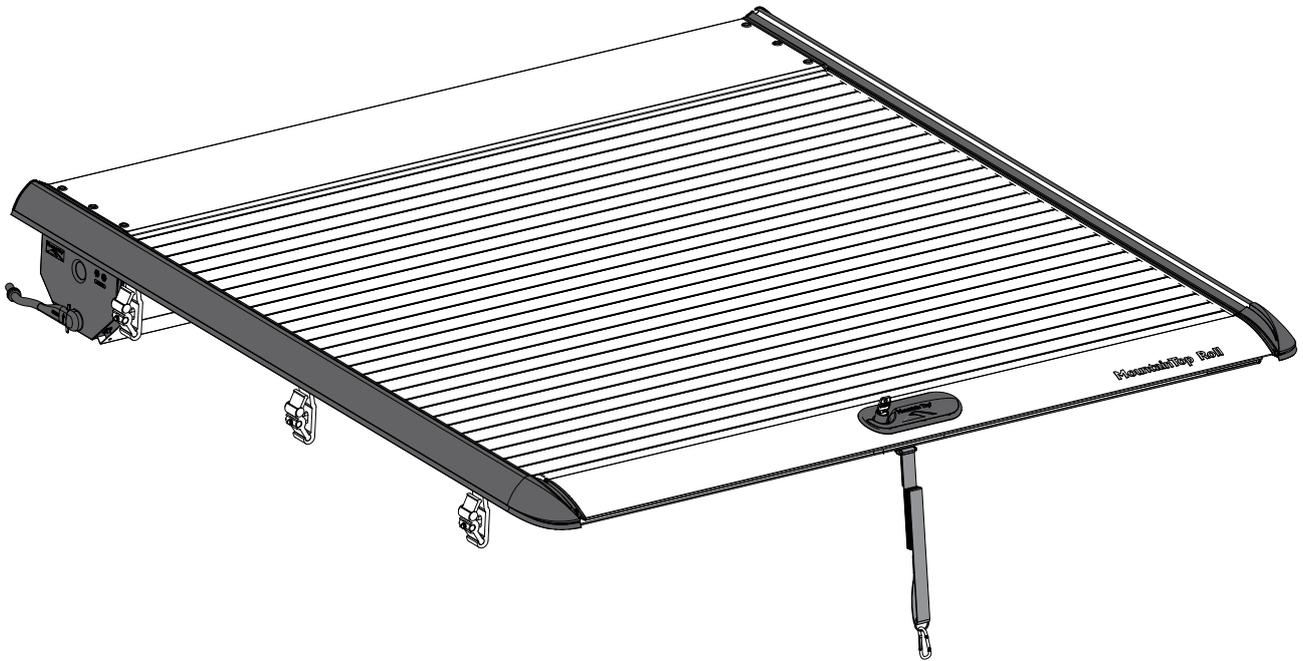

Model Year: Volkswagen 2010 T/D:
Part Number: MTR VW80 A01 Double cab



Weight: 31 / 36 kg.



Installation Time: 1 hr.






























Video Installation intruction













<http://youtu.be/2yM2hbplCdg>

Mountain Top Roll
Installation Instructions

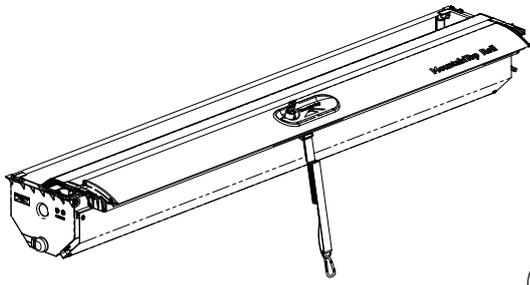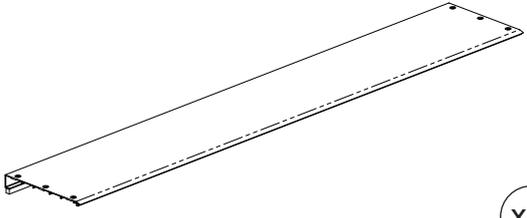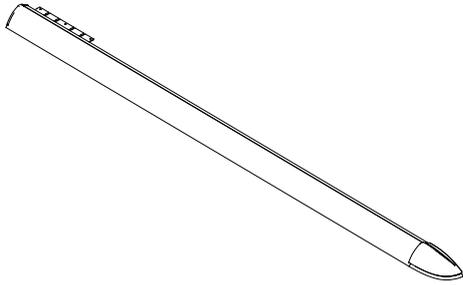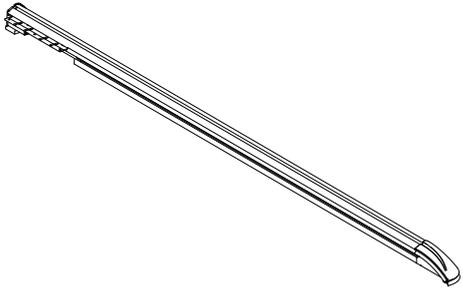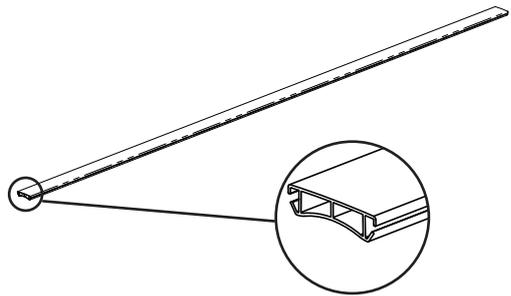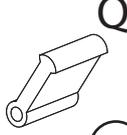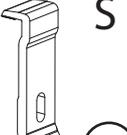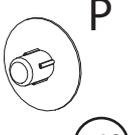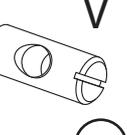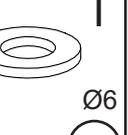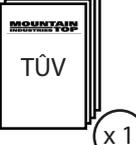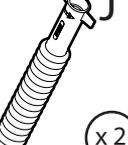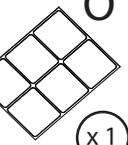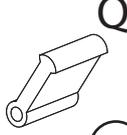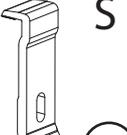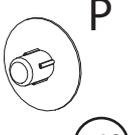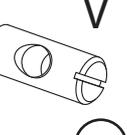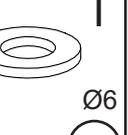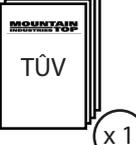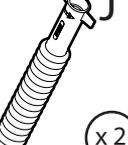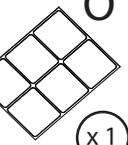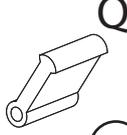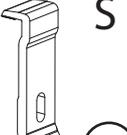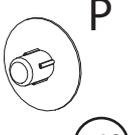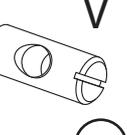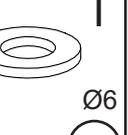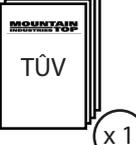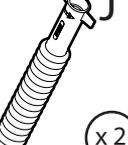
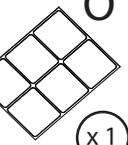


 <p>A</p> <p>x 1</p>	 <p>B</p> <p>x 1</p>																										
 <p>C</p> <p>x 1</p>	 <p>D</p> <p>x 1</p>																										
 <p>E</p> <p>x 1</p>																											
<table border="1"> <tr> <td data-bbox="151 1361 319 1556">  <p>Kit</p> <p>x 1</p> </td> <td data-bbox="331 1361 510 1556">  <p>Q</p> <p>x 6</p> </td> <td data-bbox="523 1361 702 1556">  <p>R</p> <p>x 6</p> </td> <td data-bbox="715 1361 893 1556">  <p>S</p> <p>x 6</p> </td> <td data-bbox="906 1361 1085 1556">  <p>P</p> <p>x 12</p> </td> <td data-bbox="1098 1361 1276 1556">  <p>V</p> <p>x 6</p> </td> <td data-bbox="1289 1361 1468 1556">  <p>T</p> <p>Ø6</p> <p>x 6</p> </td> </tr> <tr> <td data-bbox="151 1574 319 1769">  <p>Installation Manual</p> <p>x 1</p> </td> <td data-bbox="331 1574 510 1769">  <p>U</p> <p>M8x35</p> <p>x 6</p> </td> <td data-bbox="523 1574 702 1769">  <p>I</p> <p>M6x12</p> <p>x 4</p> </td> <td data-bbox="715 1574 893 1769">  <p>M</p> <p>x 6</p> </td> <td data-bbox="906 1574 1085 1769">  <p>L</p> <p>M5x6</p> <p>x 6</p> </td> <td data-bbox="1098 1574 1276 1769">  <p>K</p> <p>x 6</p> </td> <td data-bbox="1289 1574 1468 1769">  <p>G</p> <p>x 2</p> </td> </tr> <tr> <td data-bbox="151 1787 319 1982">  <p>TUV</p> <p>x 1</p> </td> <td data-bbox="331 1787 510 1982">  <p>H</p> <p>400mm</p> <p>x 2</p> </td> <td data-bbox="523 1787 702 1982">  <p>J</p> <p>x 2</p> </td> <td data-bbox="715 1787 893 1982">  <p>N</p> <p>x 2</p> </td> <td data-bbox="906 1787 1085 1982">  <p>O</p> <p>x 1</p> </td> <td colspan="2"></td> </tr> </table>							 <p>Kit</p> <p>x 1</p>	 <p>Q</p> <p>x 6</p>	 <p>R</p> <p>x 6</p>	 <p>S</p> <p>x 6</p>	 <p>P</p> <p>x 12</p>	 <p>V</p> <p>x 6</p>	 <p>T</p> <p>Ø6</p> <p>x 6</p>	 <p>Installation Manual</p> <p>x 1</p>	 <p>U</p> <p>M8x35</p> <p>x 6</p>	 <p>I</p> <p>M6x12</p> <p>x 4</p>	 <p>M</p> <p>x 6</p>	 <p>L</p> <p>M5x6</p> <p>x 6</p>	 <p>K</p> <p>x 6</p>	 <p>G</p> <p>x 2</p>	 <p>TUV</p> <p>x 1</p>	 <p>H</p> <p>400mm</p> <p>x 2</p>	 <p>J</p> <p>x 2</p>	 <p>N</p> <p>x 2</p>	 <p>O</p> <p>x 1</p>		
 <p>Kit</p> <p>x 1</p>	 <p>Q</p> <p>x 6</p>	 <p>R</p> <p>x 6</p>	 <p>S</p> <p>x 6</p>	 <p>P</p> <p>x 12</p>	 <p>V</p> <p>x 6</p>	 <p>T</p> <p>Ø6</p> <p>x 6</p>																					
 <p>Installation Manual</p> <p>x 1</p>	 <p>U</p> <p>M8x35</p> <p>x 6</p>	 <p>I</p> <p>M6x12</p> <p>x 4</p>	 <p>M</p> <p>x 6</p>	 <p>L</p> <p>M5x6</p> <p>x 6</p>	 <p>K</p> <p>x 6</p>	 <p>G</p> <p>x 2</p>																					
 <p>TUV</p> <p>x 1</p>	 <p>H</p> <p>400mm</p> <p>x 2</p>	 <p>J</p> <p>x 2</p>	 <p>N</p> <p>x 2</p>	 <p>O</p> <p>x 1</p>																							

Mountain Top Roll
Installation Instructions

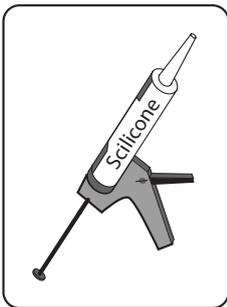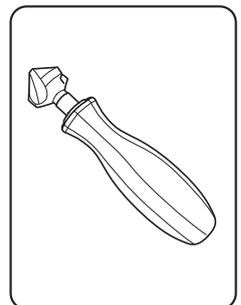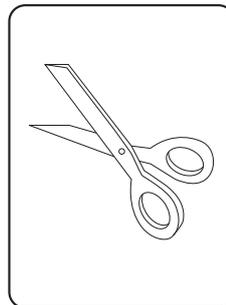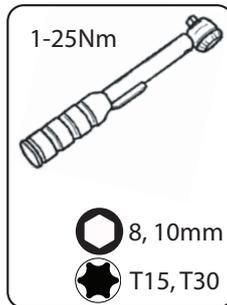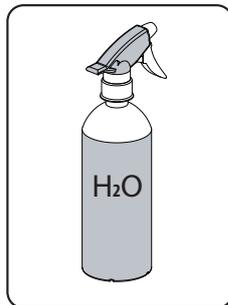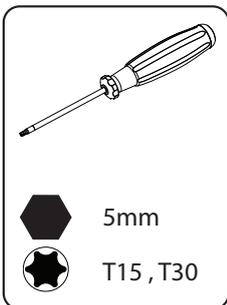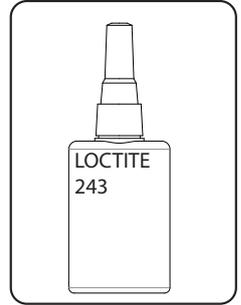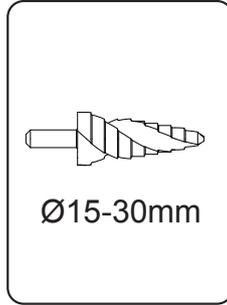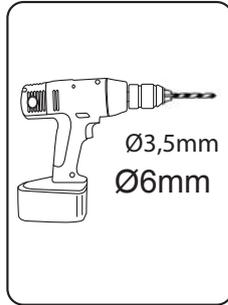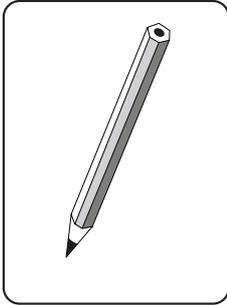

Mountain Top Roll
Installation Instructions

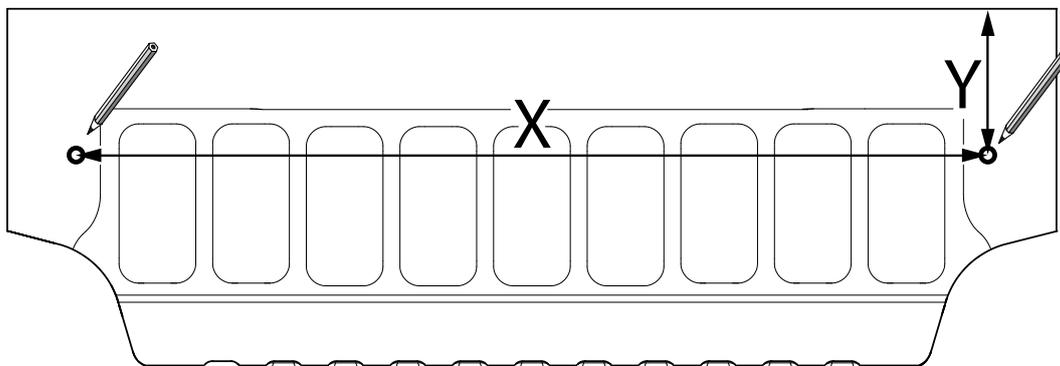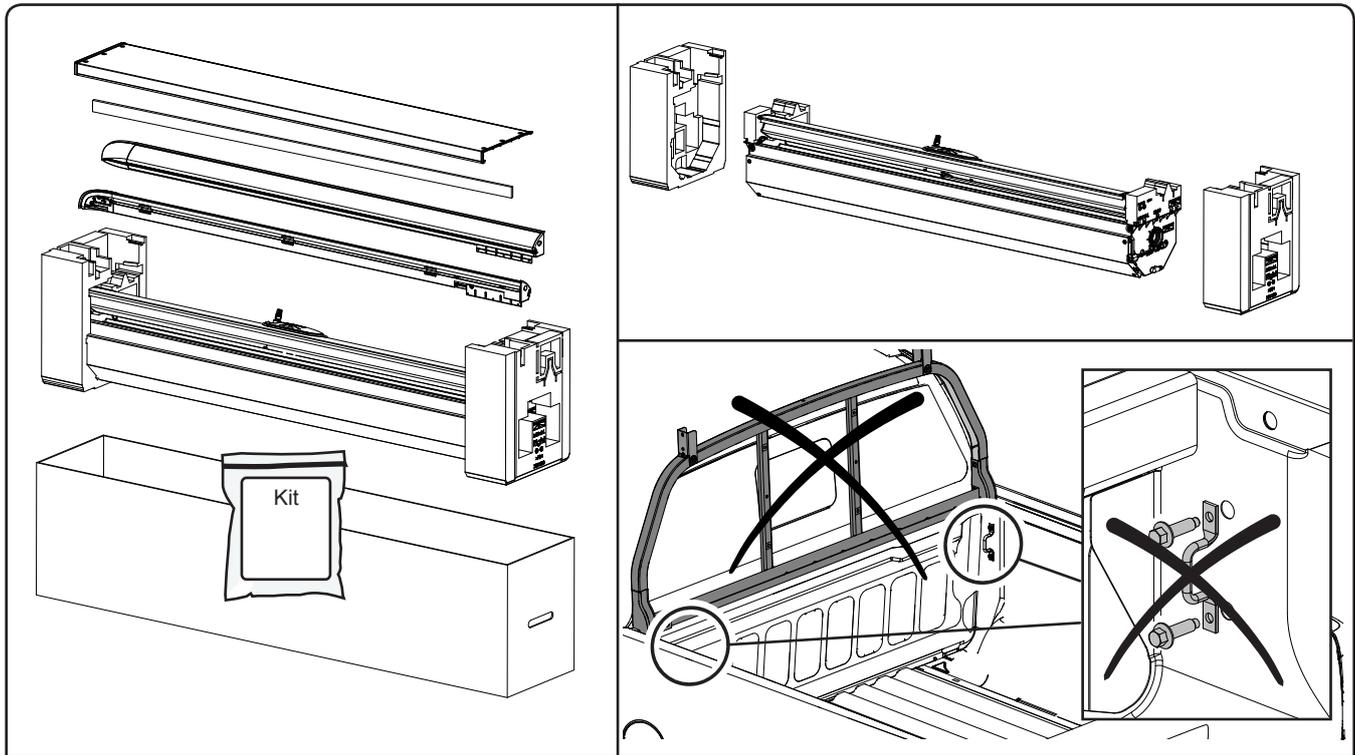


Plain bed		
	X	Y
VW	1505	183




Mountain Top Roll
Installation Instructions






Plain Bed

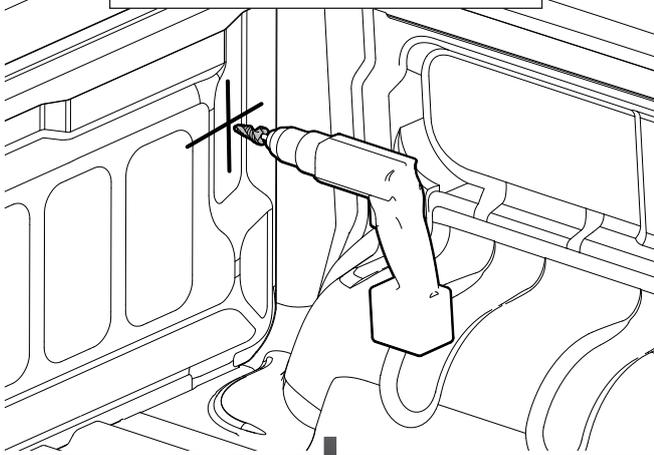

Plastliner

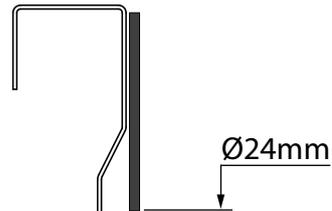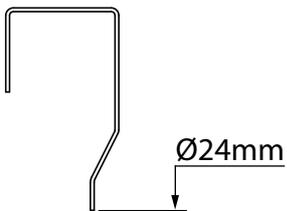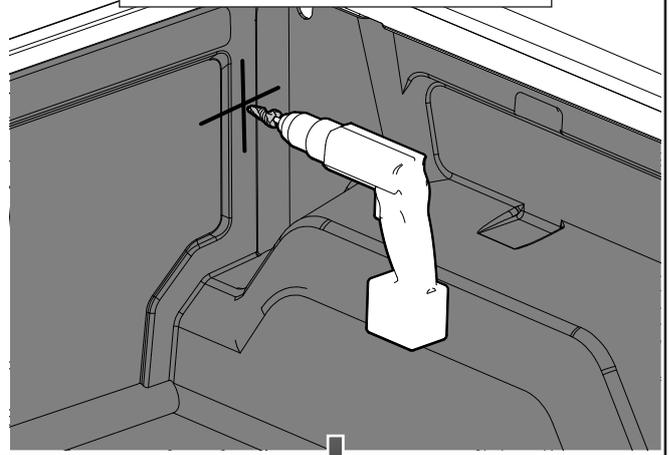

Rust protection
Rostschutzmittel
Anti-rouille
Anti roest

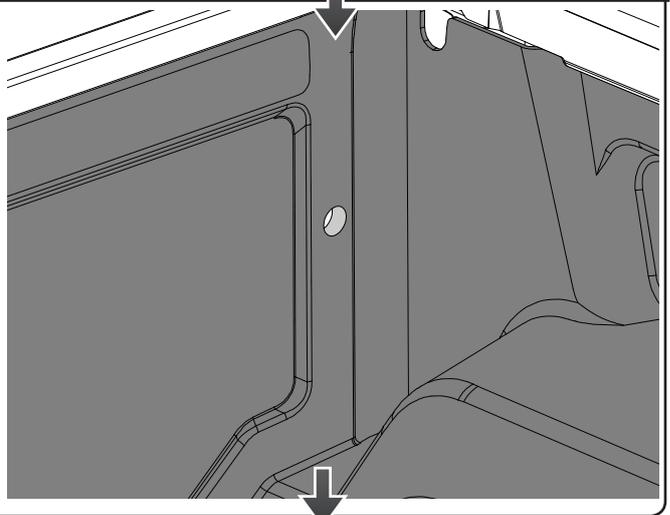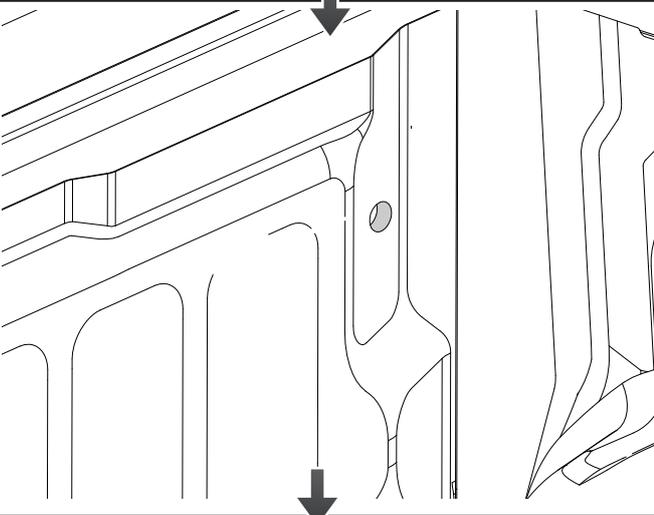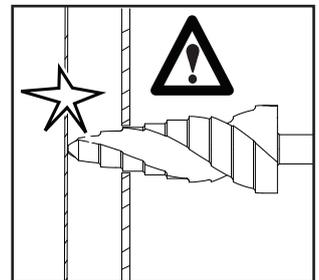





Mountain Top Roll
Installation Instructions



Plain Bed





Plastliner

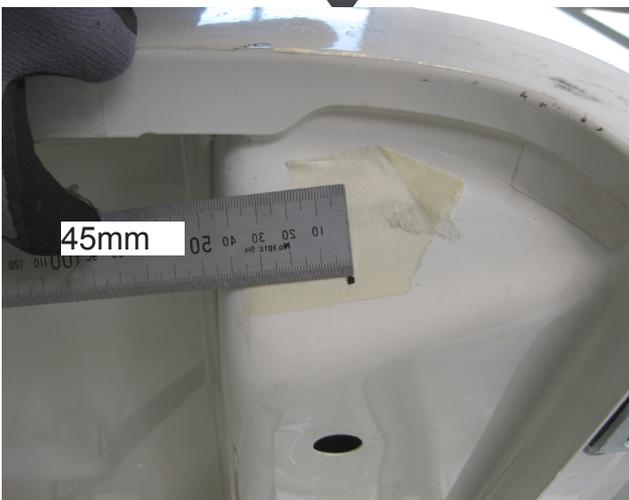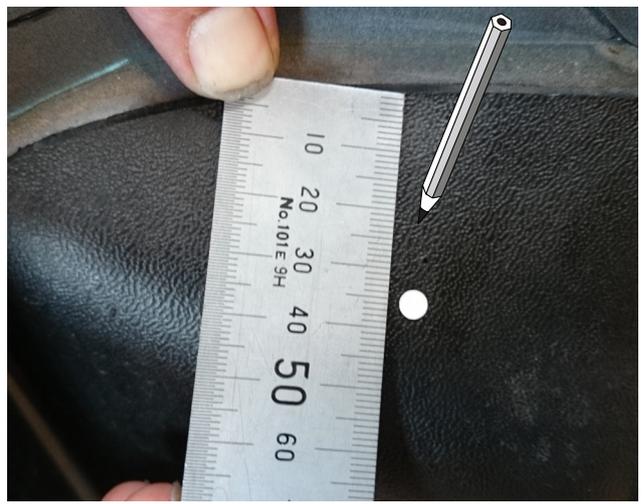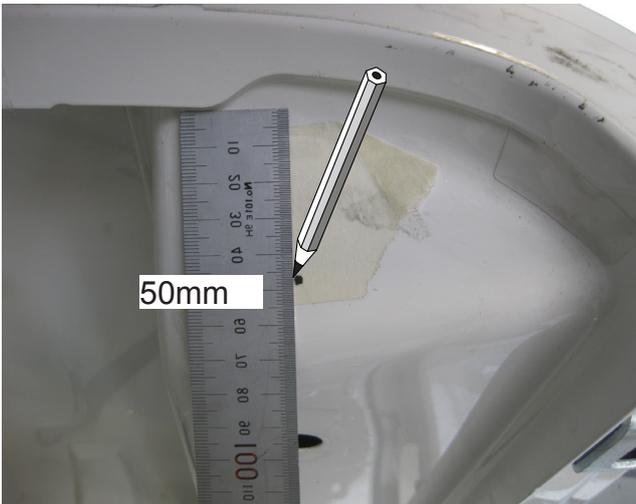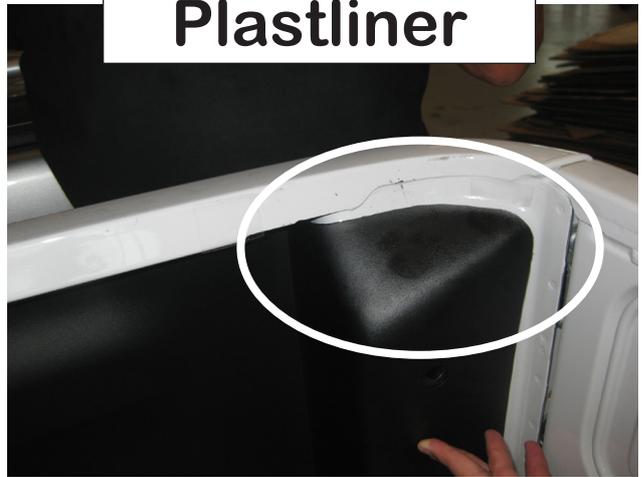


Mountain Top Roll
Installation Instructions

Plain Bed

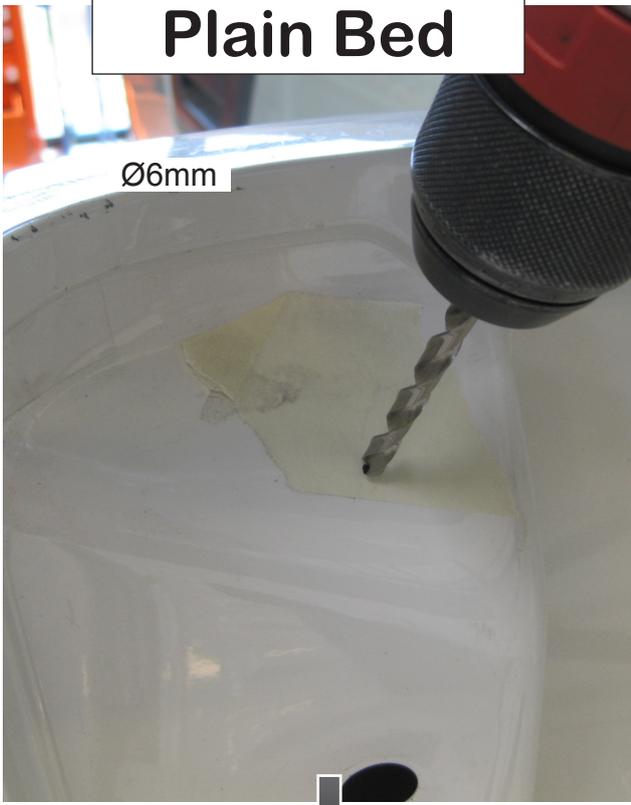





Plastliner

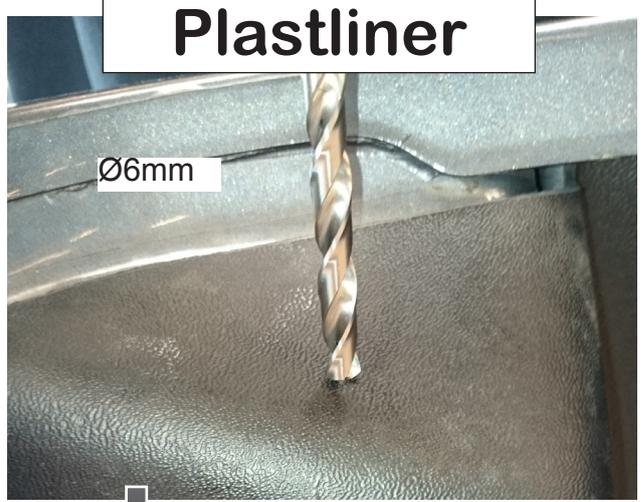

Mountain Top Roll
Installation Instructions



Mountain Top Roll
Installation Instructions
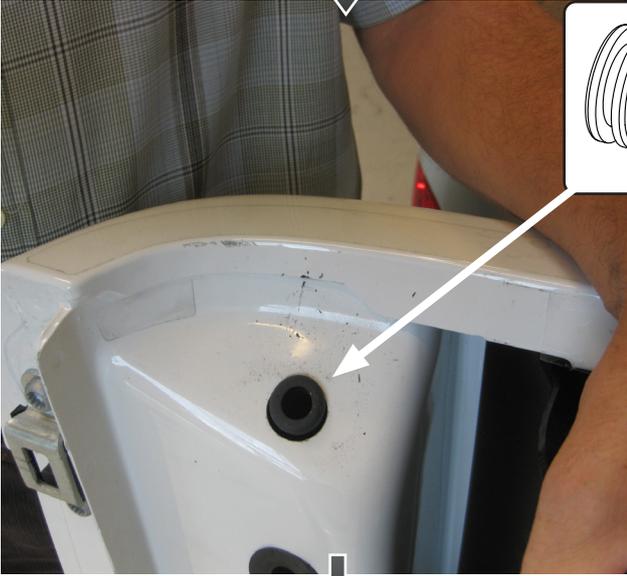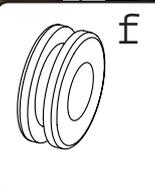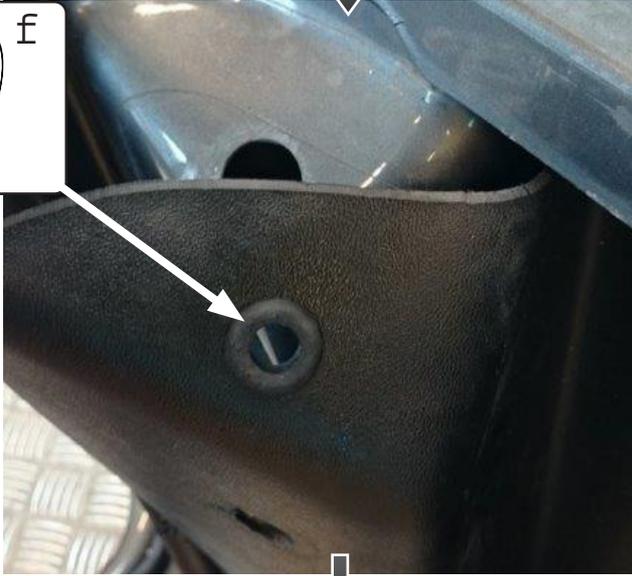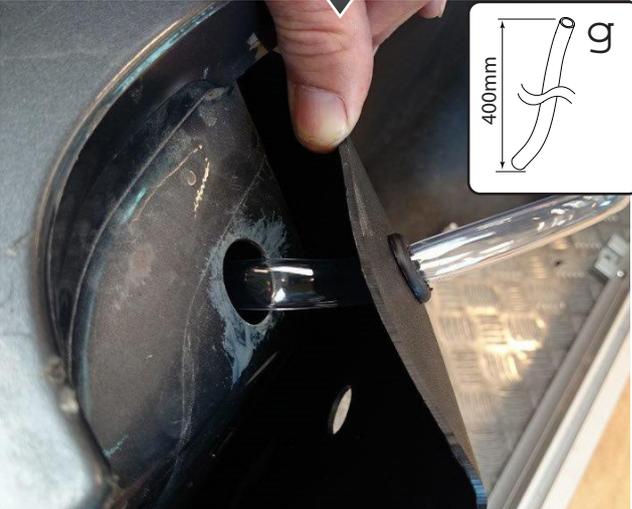
<p>Plain Bed</p> 	 <p>Rust protection Rostschutzmittel Anti-rouille Anti roest</p>	<p>Plastliner</p> 
		
		



Mountain Top Roll
Installation Instructions

Plain Bed




Plastliner





Mountain Top Roll
Installation Instructions

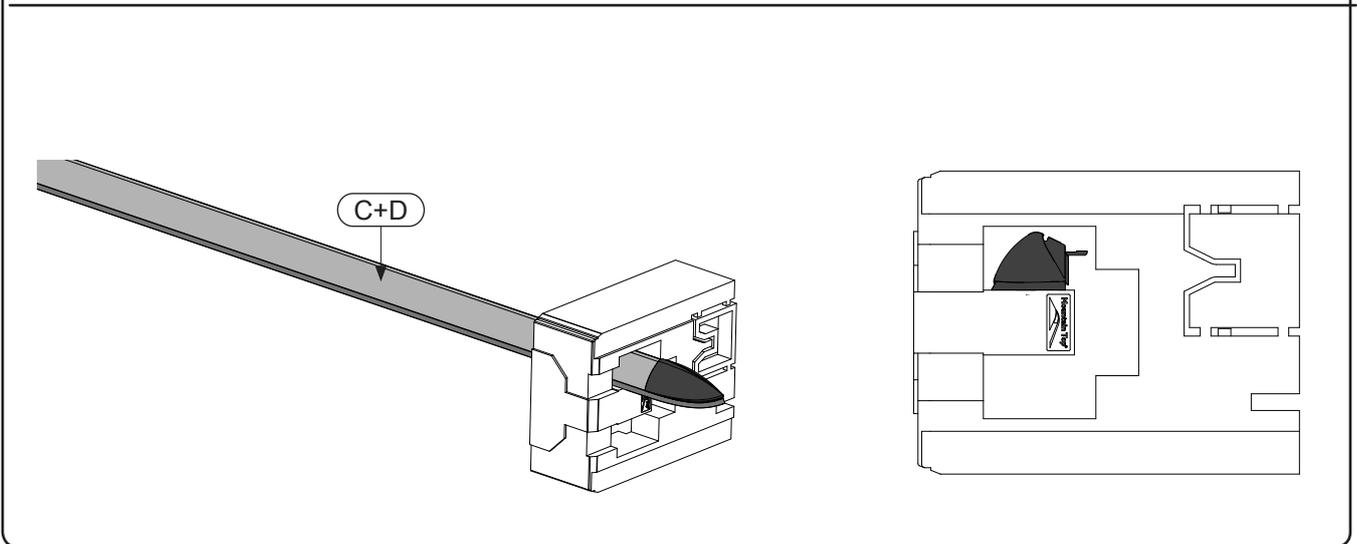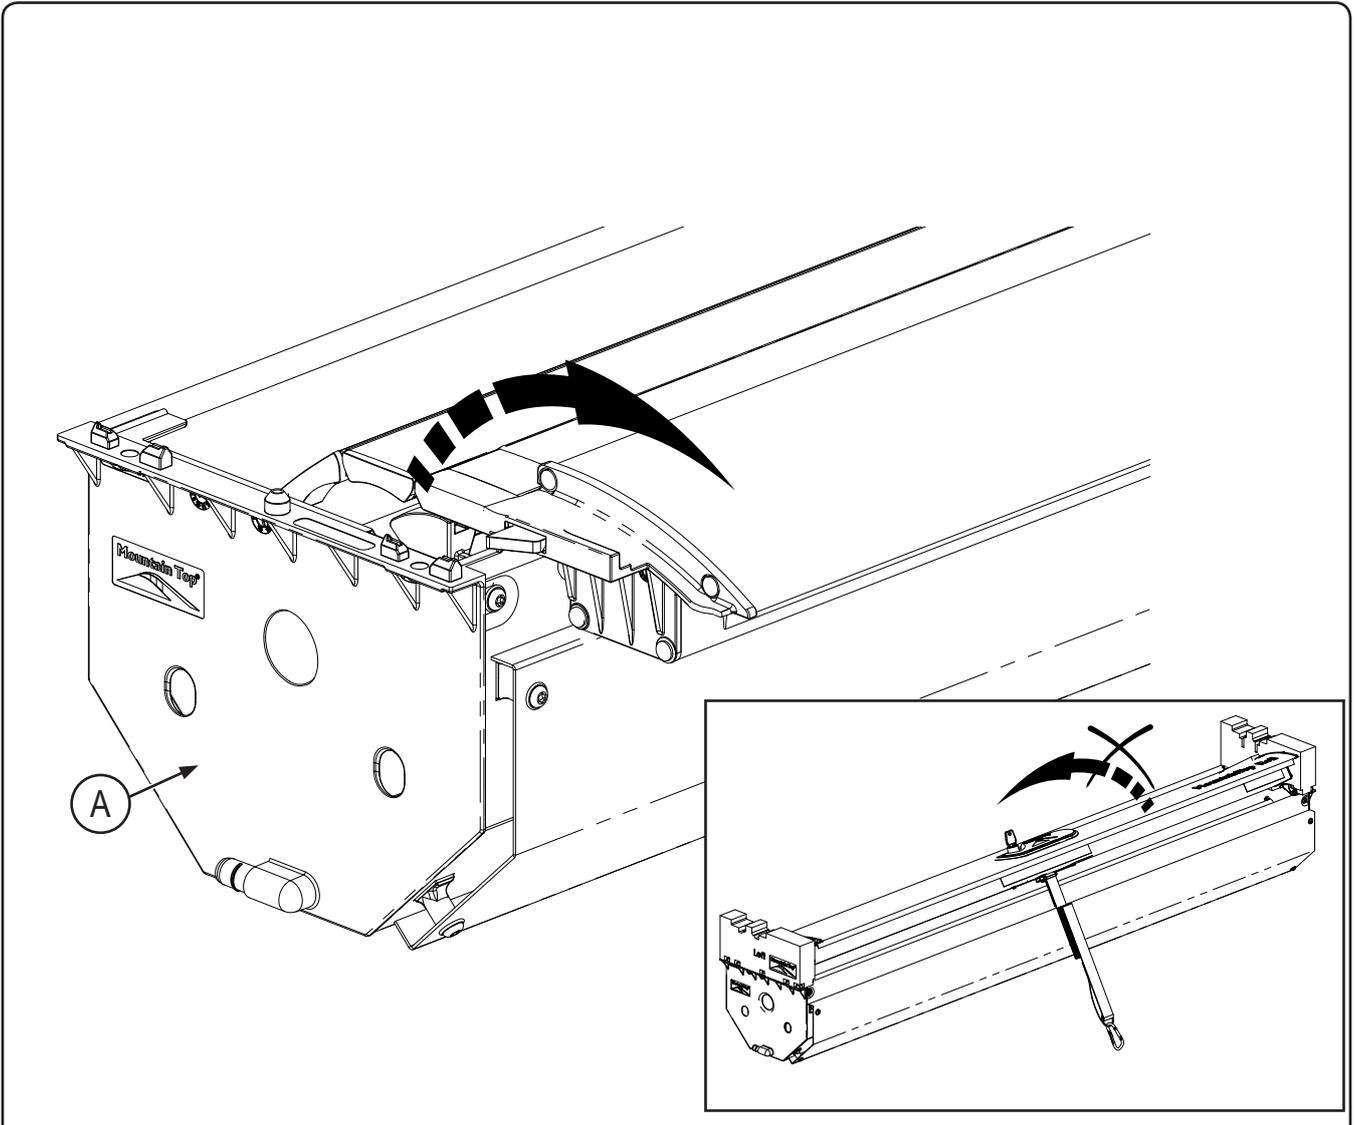


Mountain Top Roll
Installation Instructions

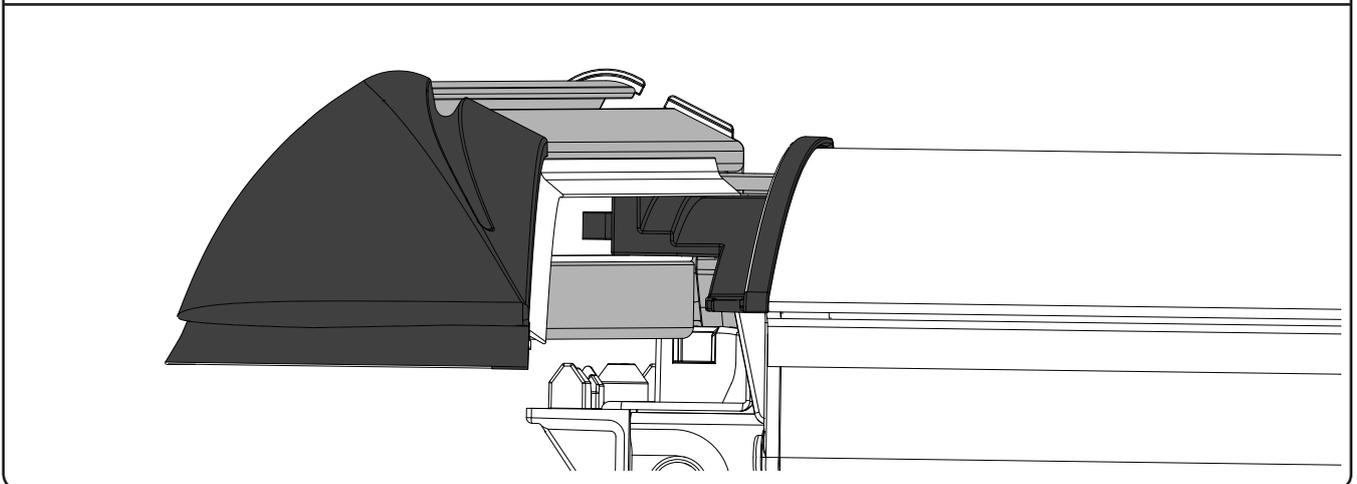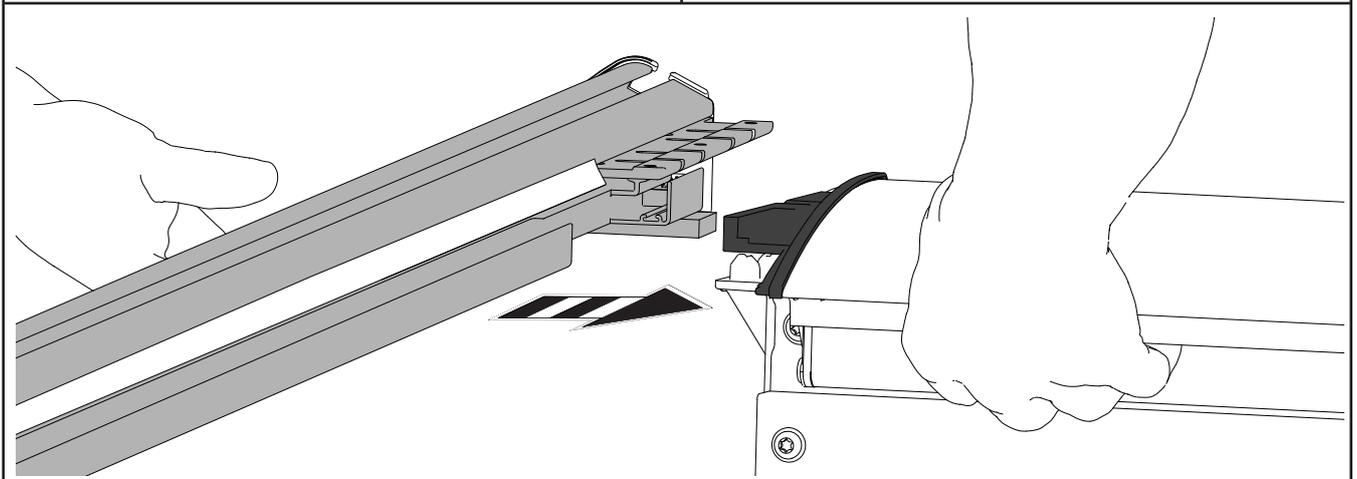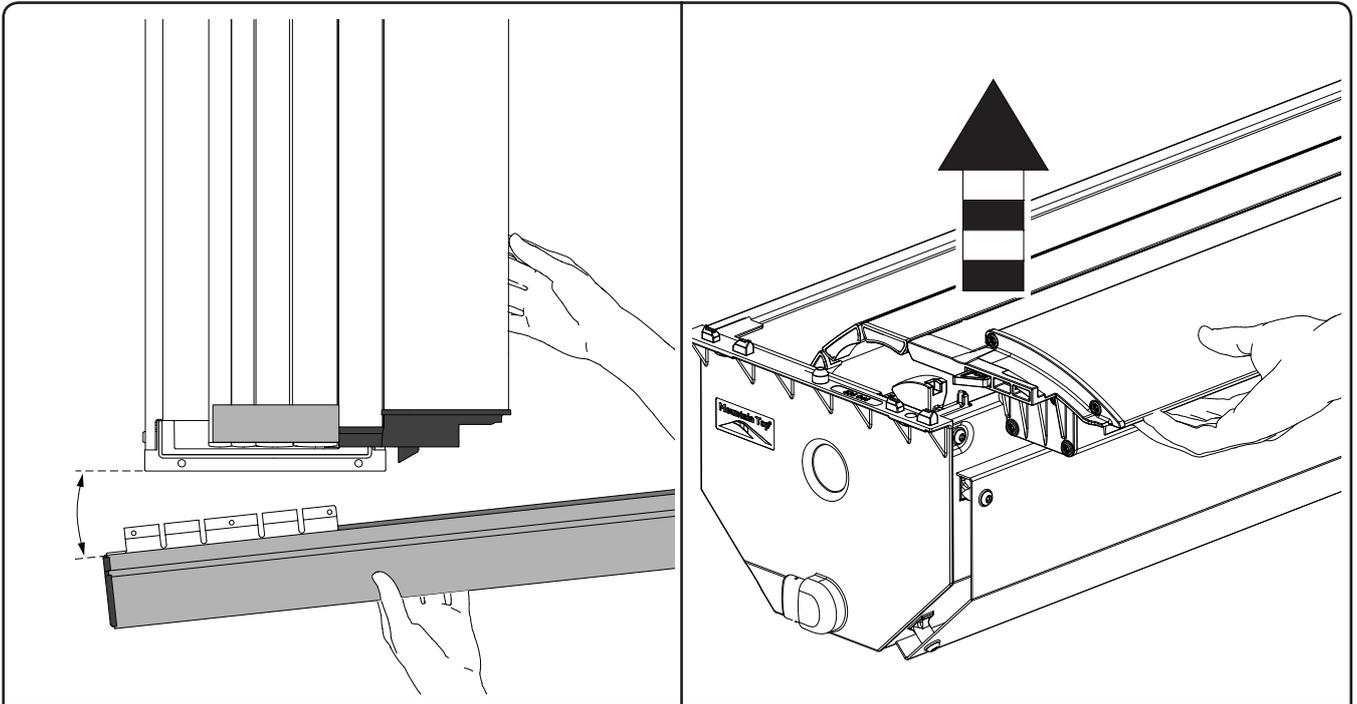


Mountain Top Roll
Installation Instructions

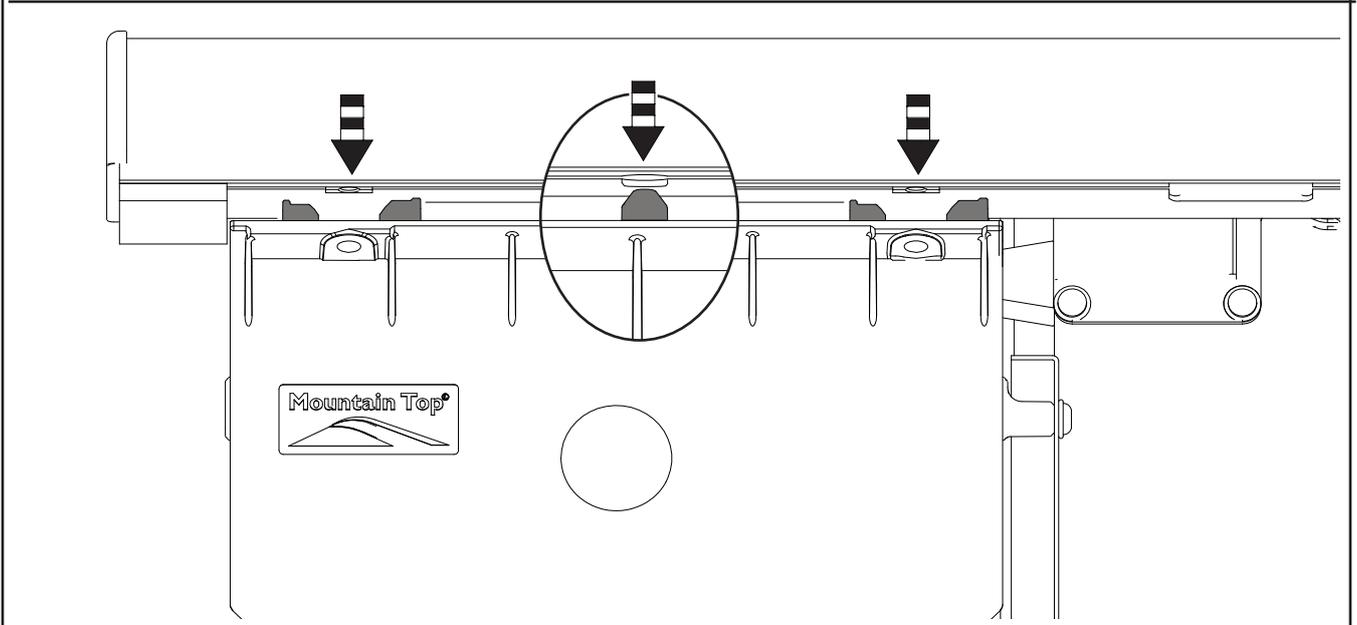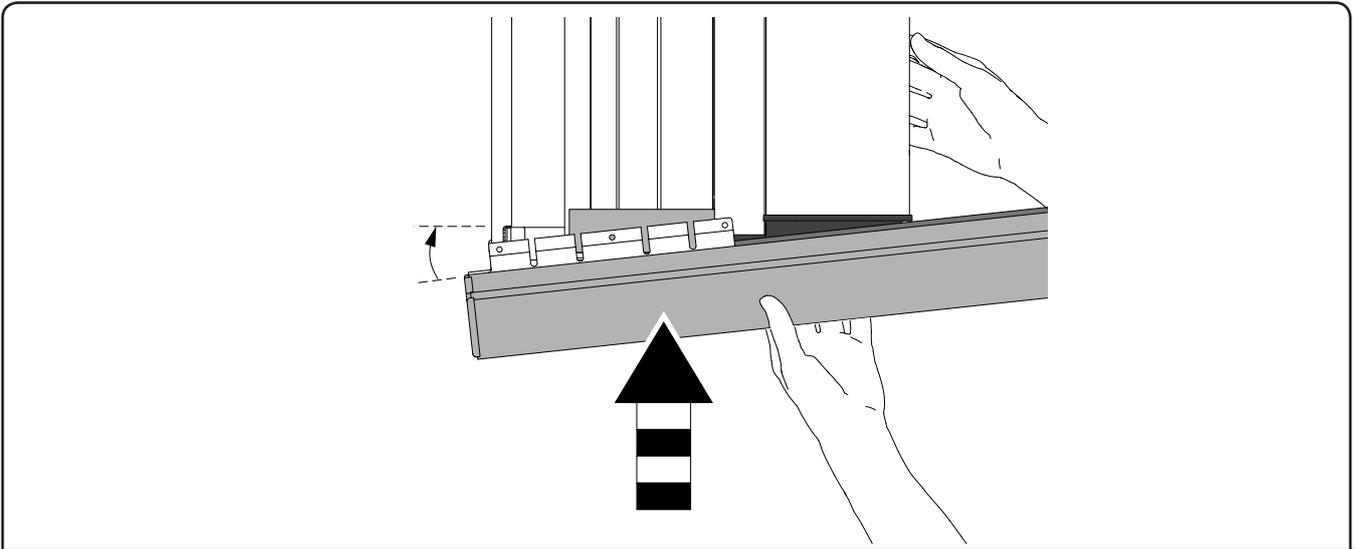


 T30 4,8 +/-1Nm

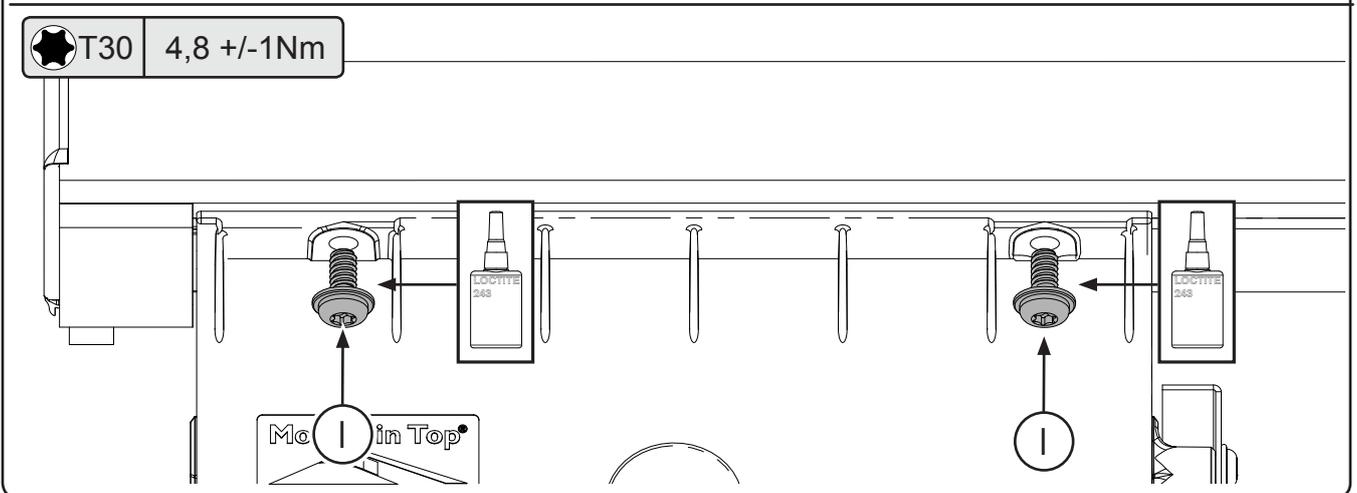




Mountain Top Roll
Installation Instructions

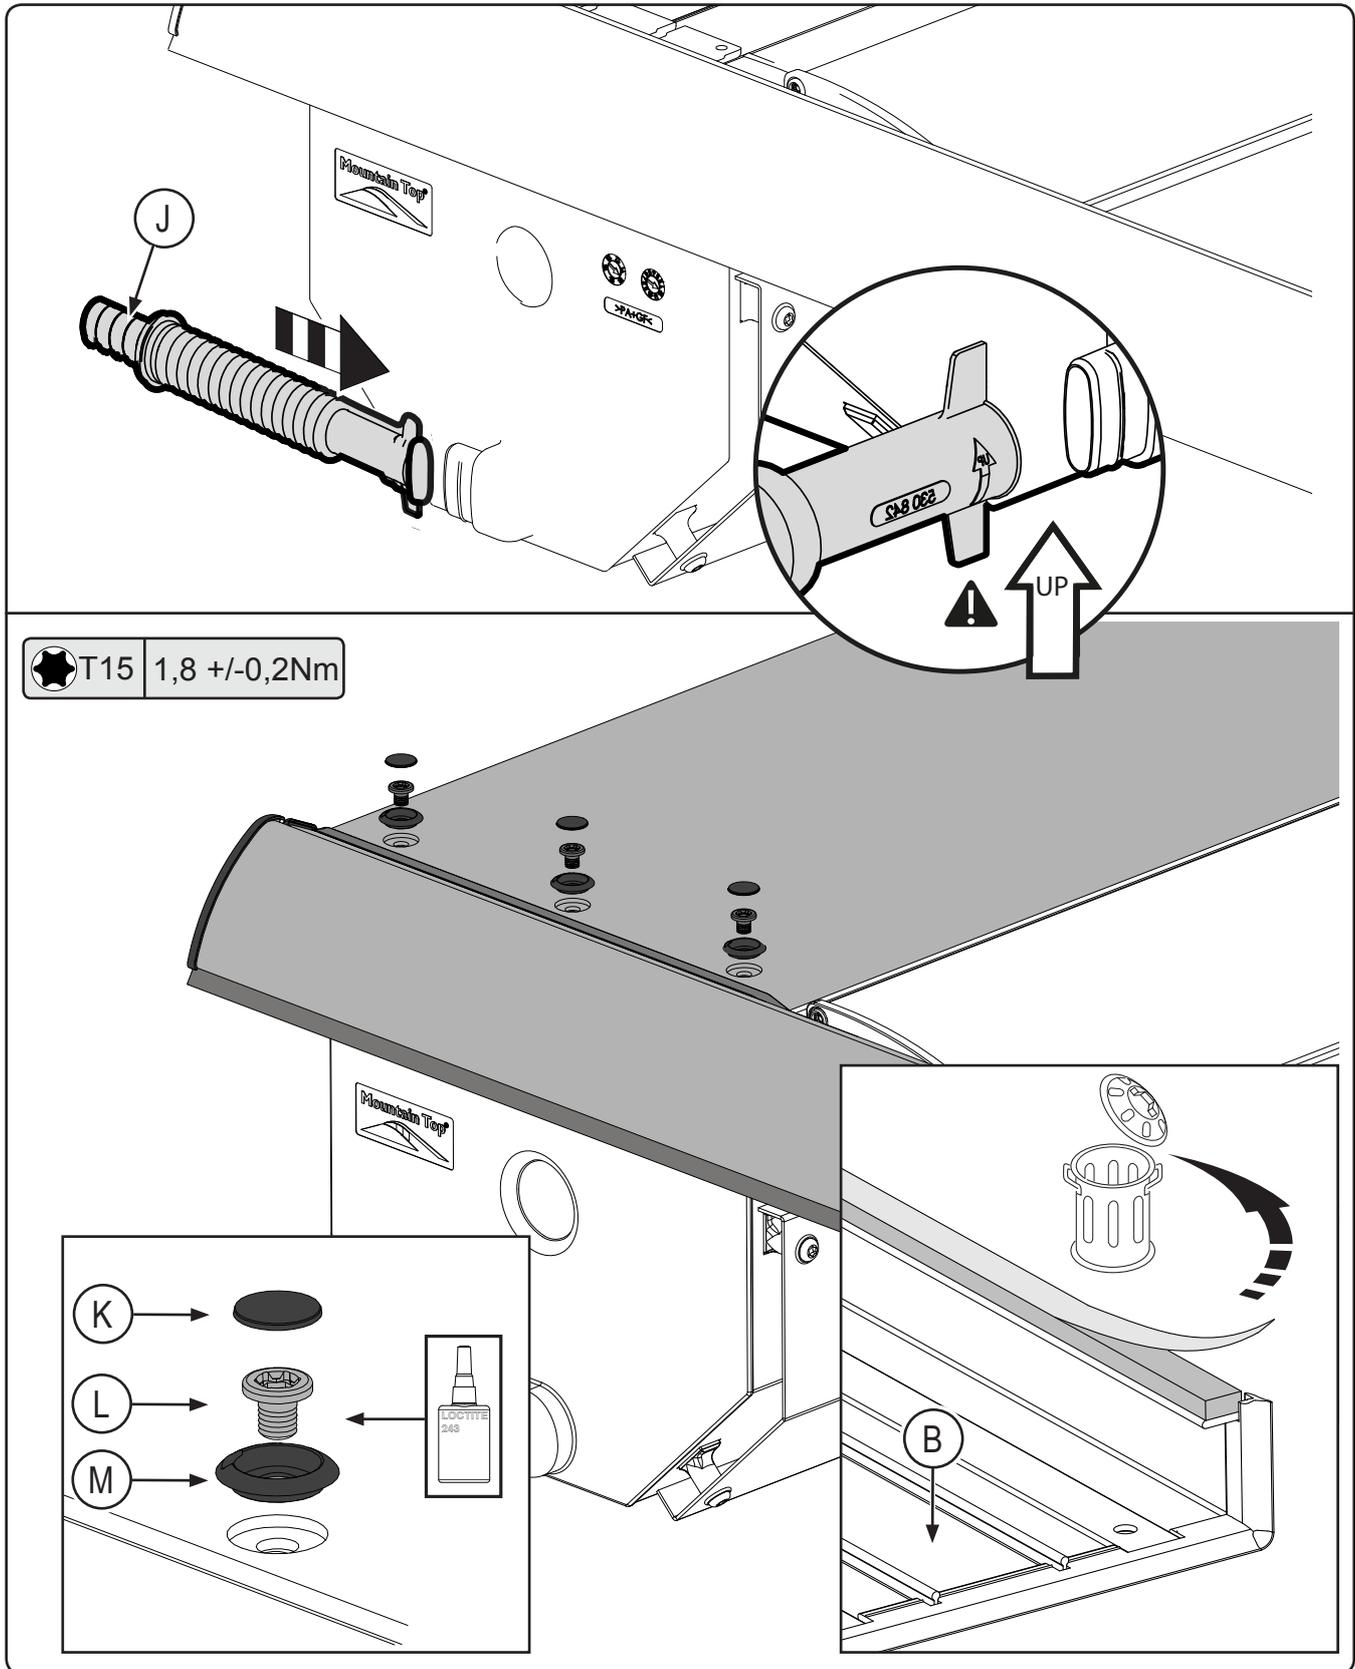


Mountain Top Roll
Installation Instructions

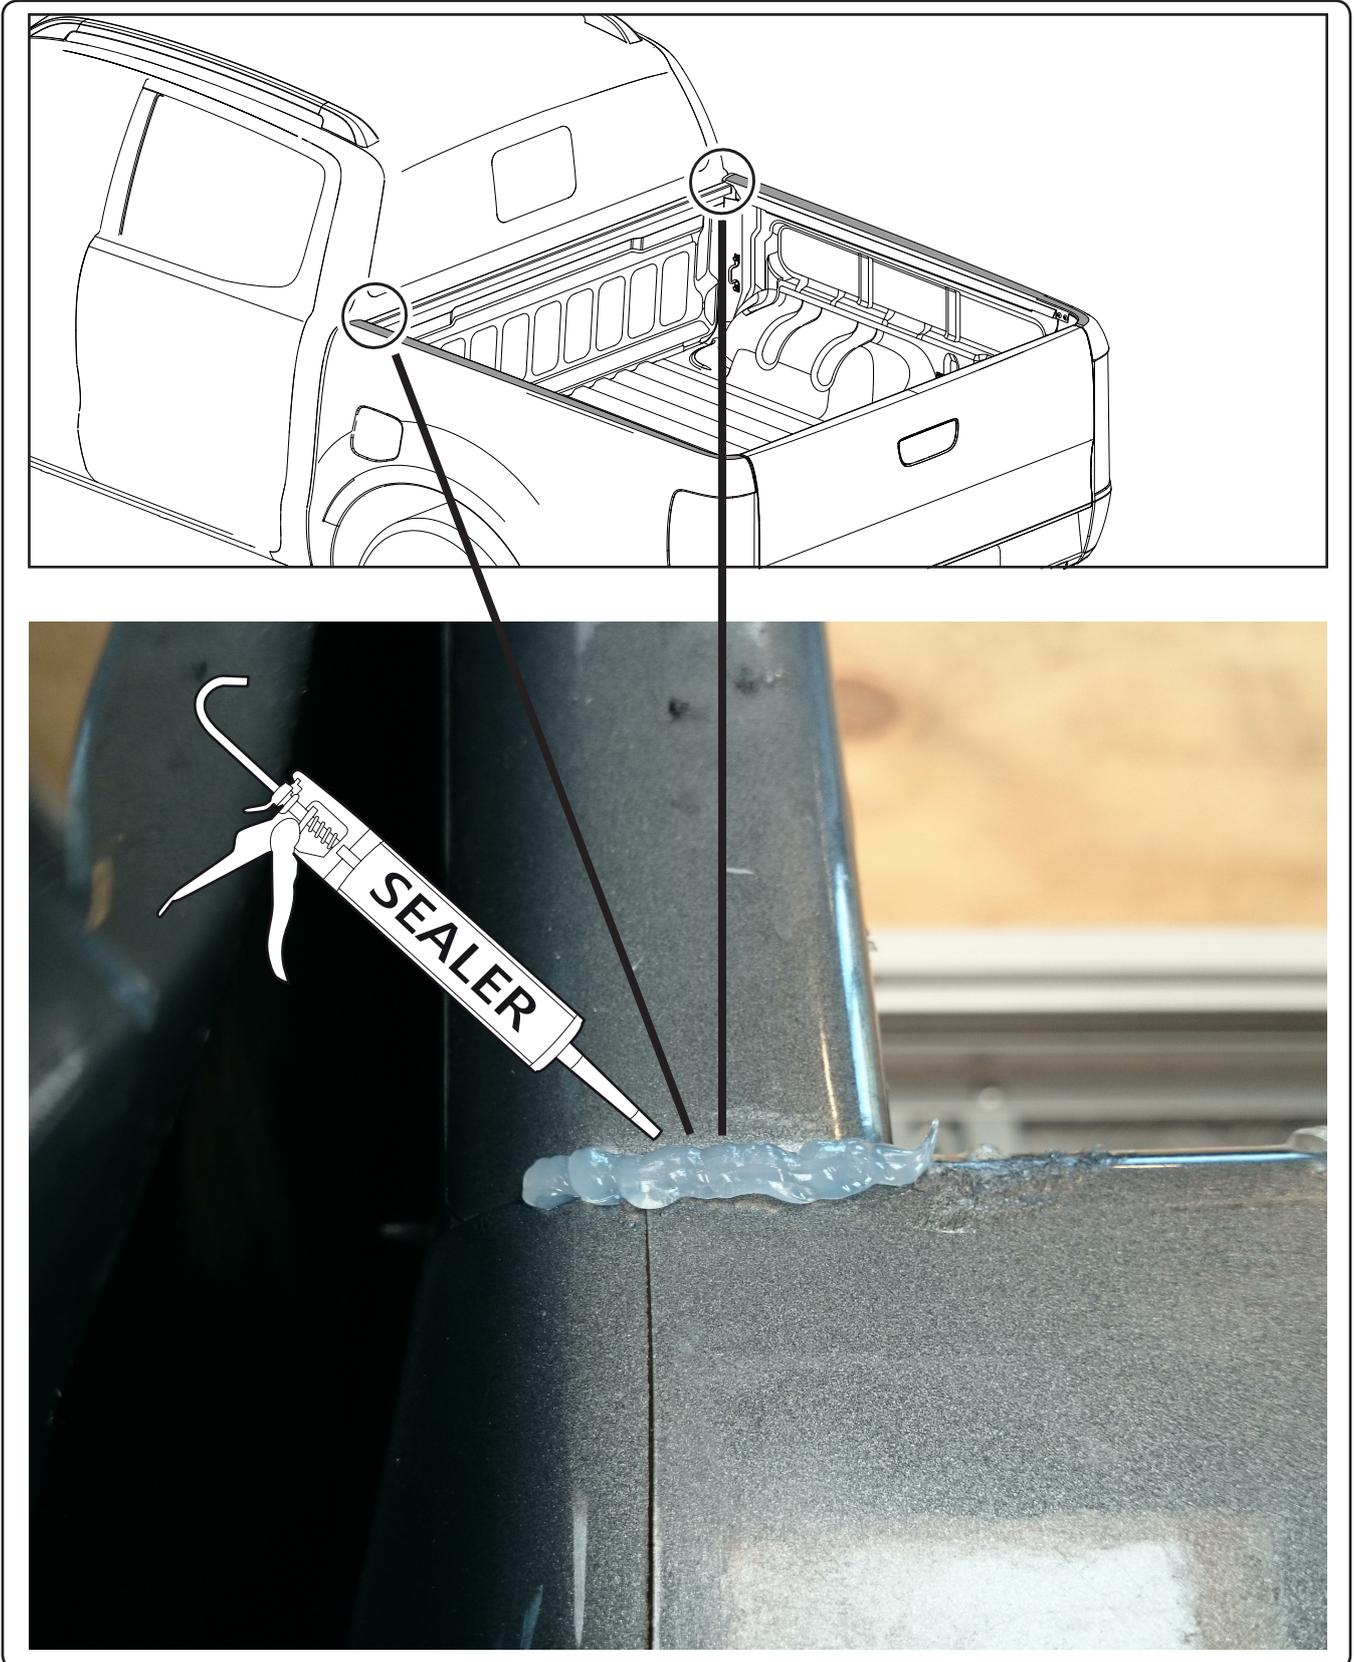




Mountain Top Roll
Installation Instructions

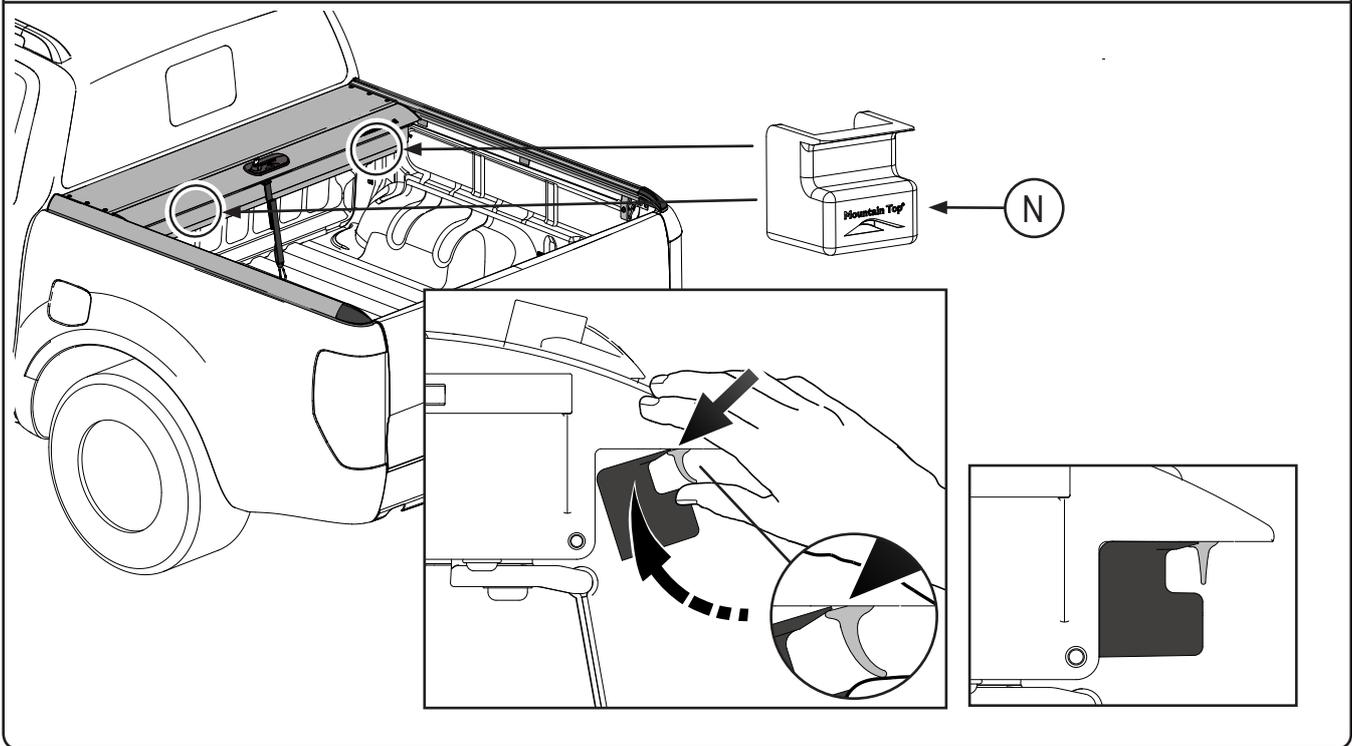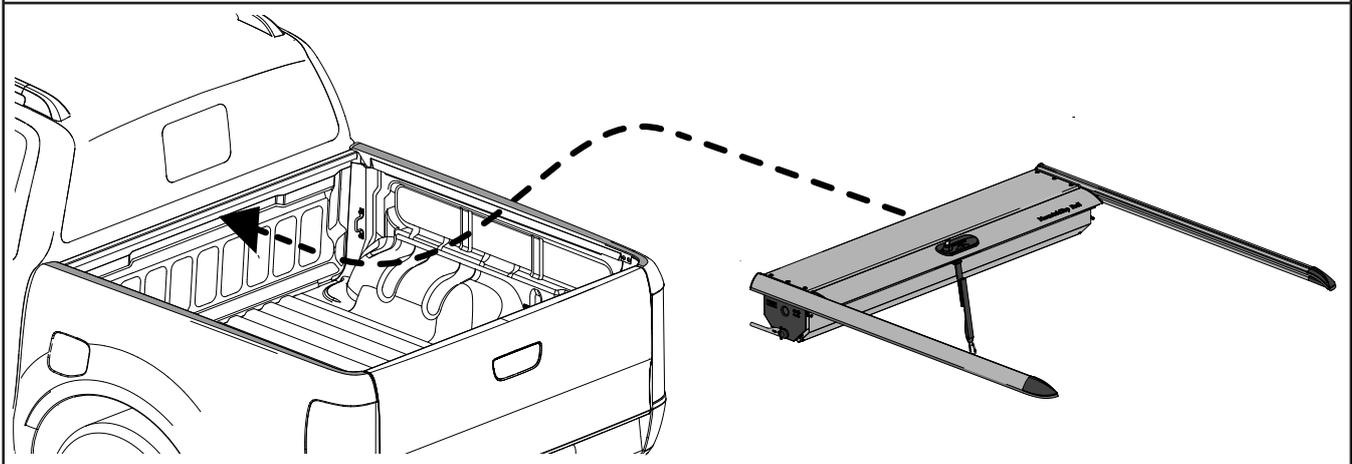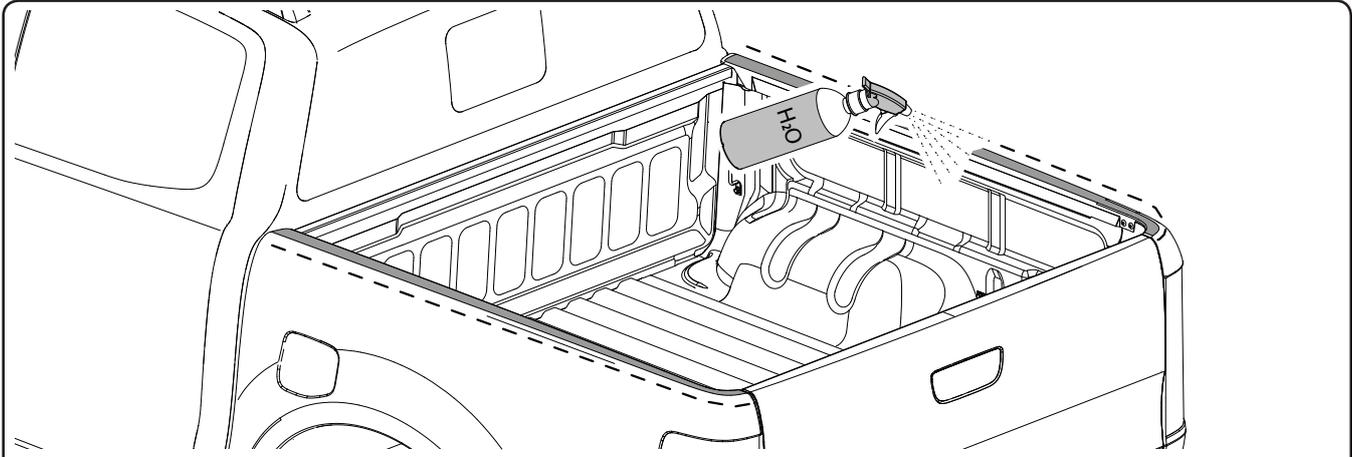



Mountain Top Roll
Installation Instructions

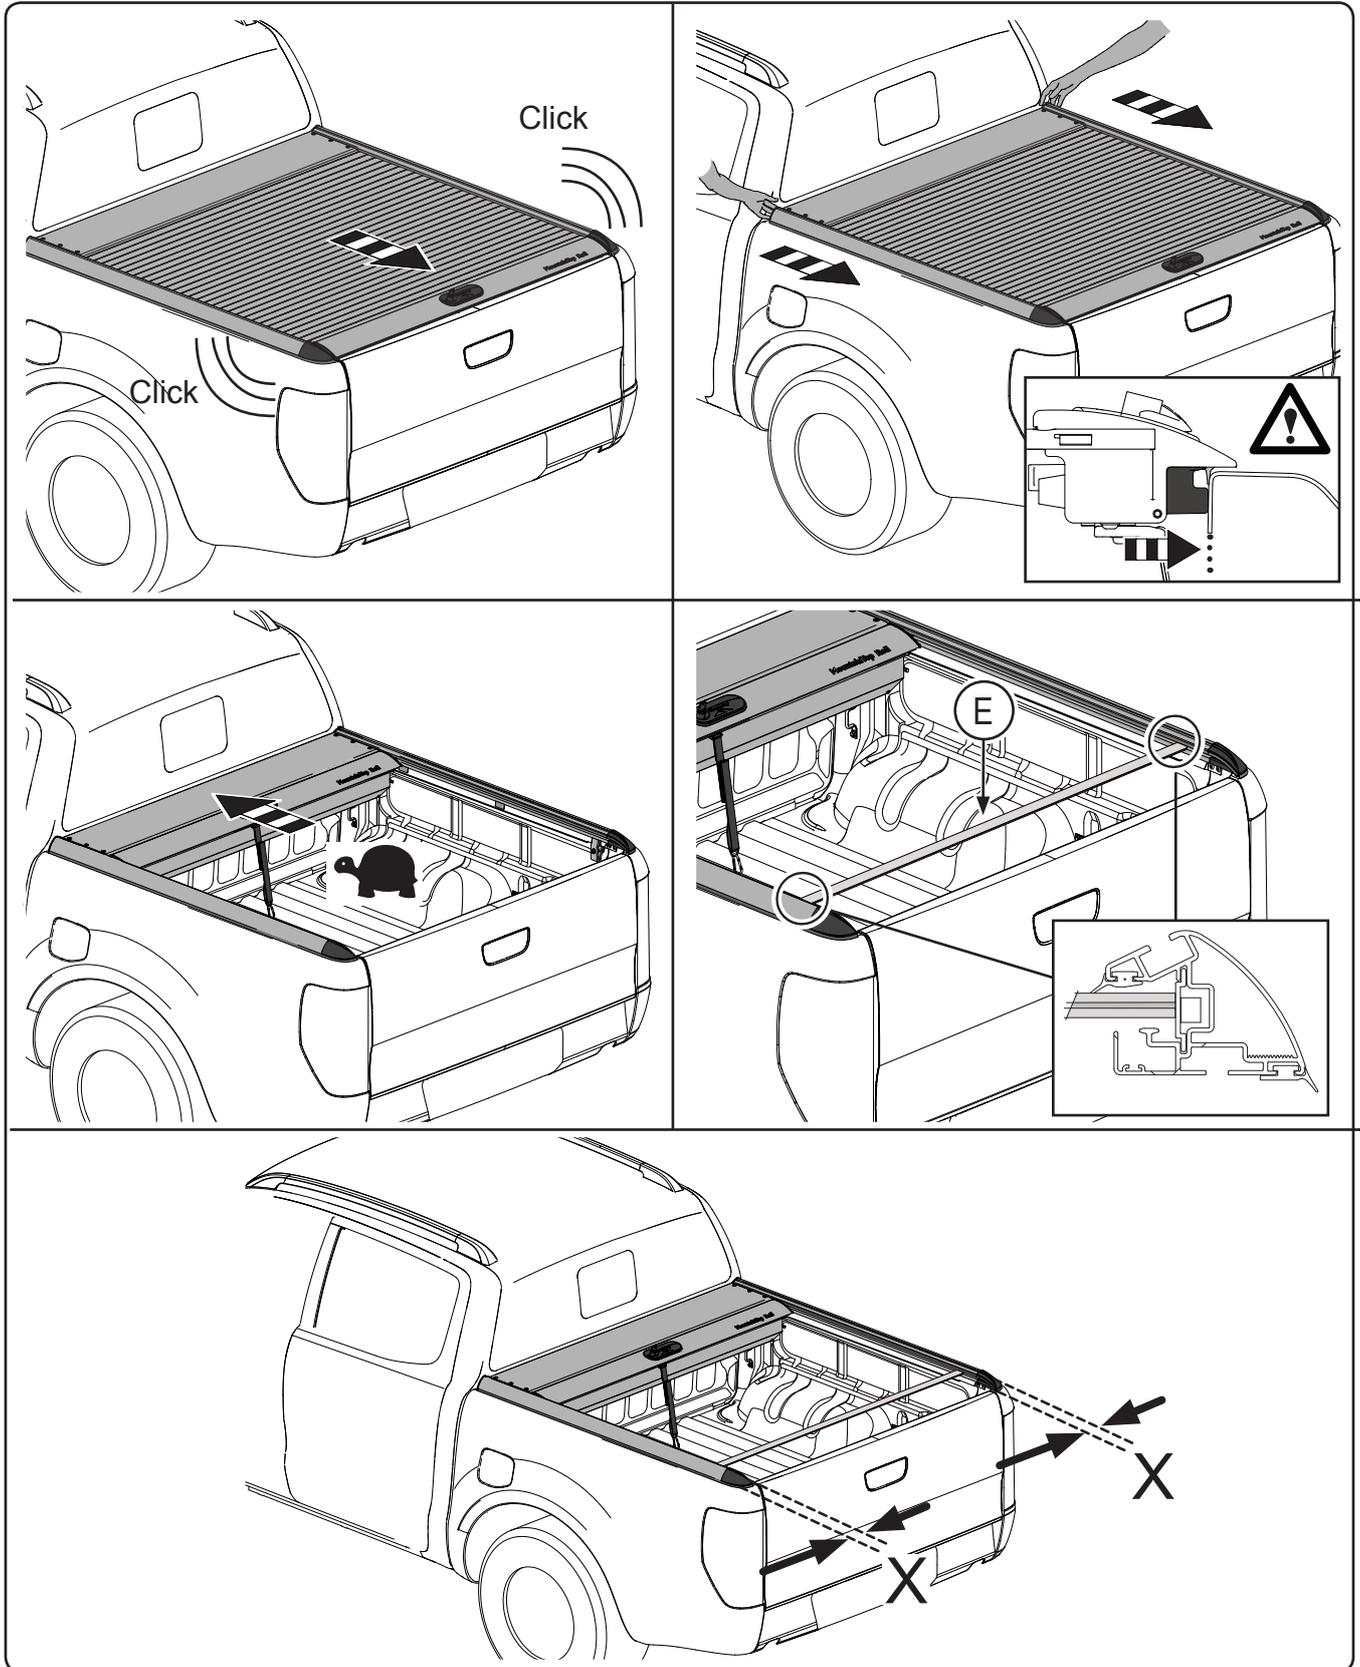




Mountain Top Roll
Installation Instructions

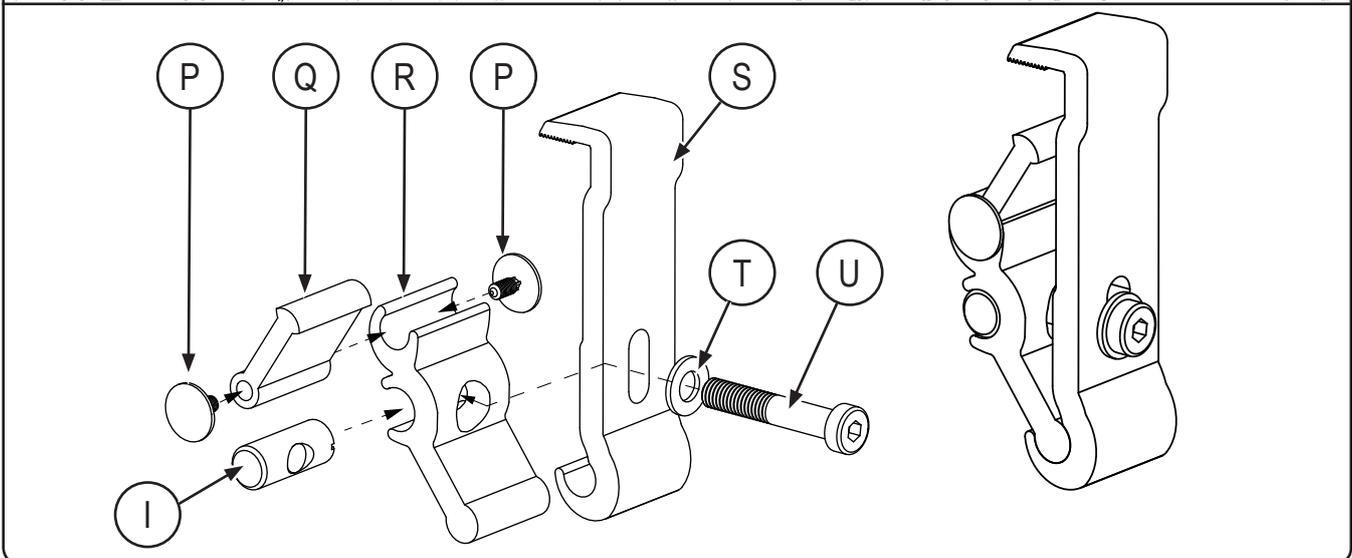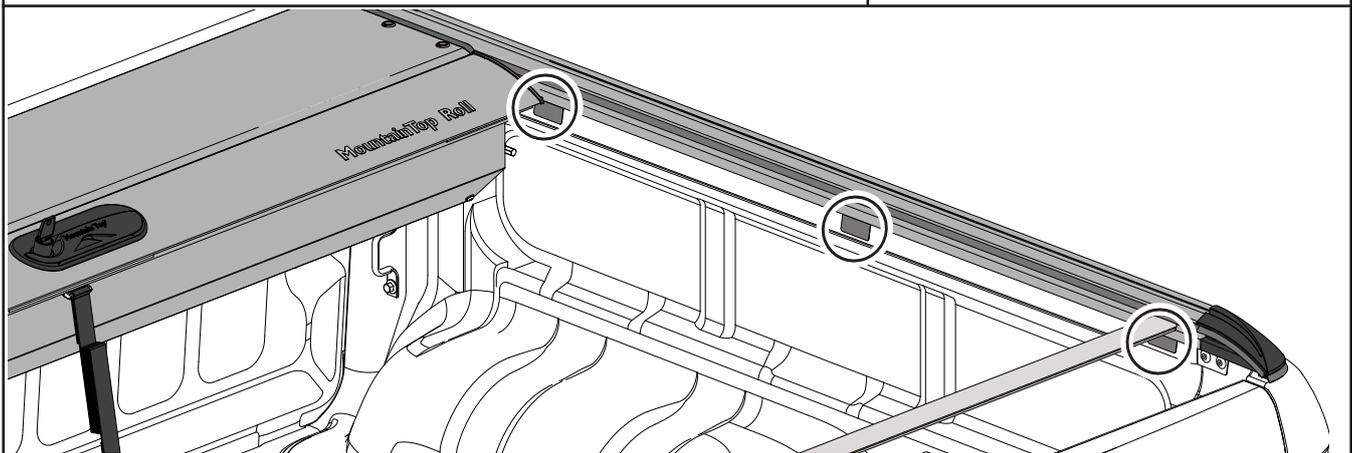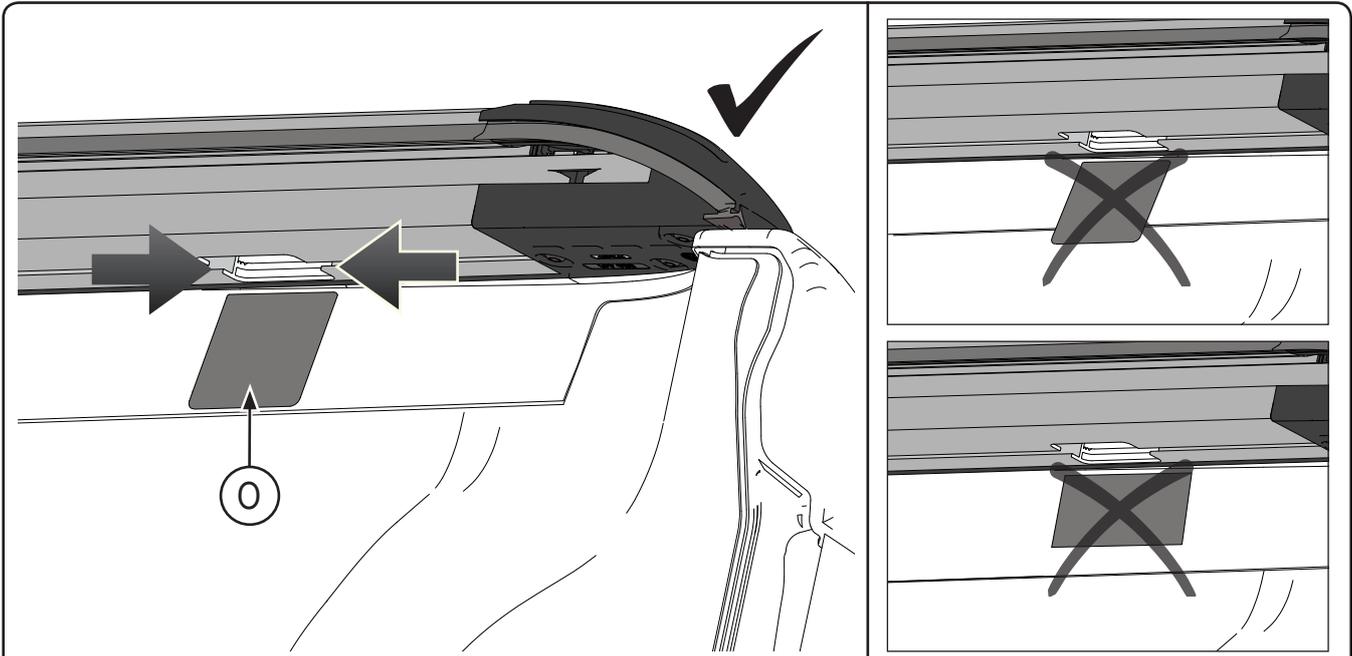




Mountain Top Roll
Installation Instructions

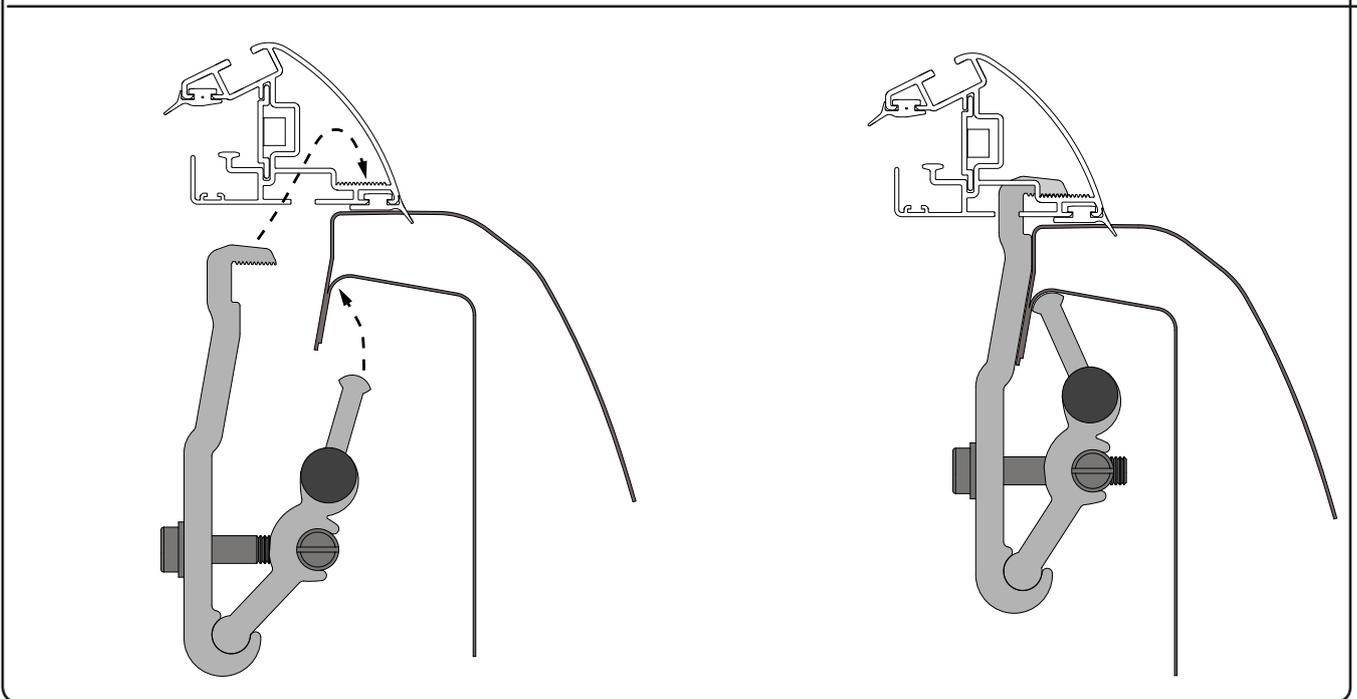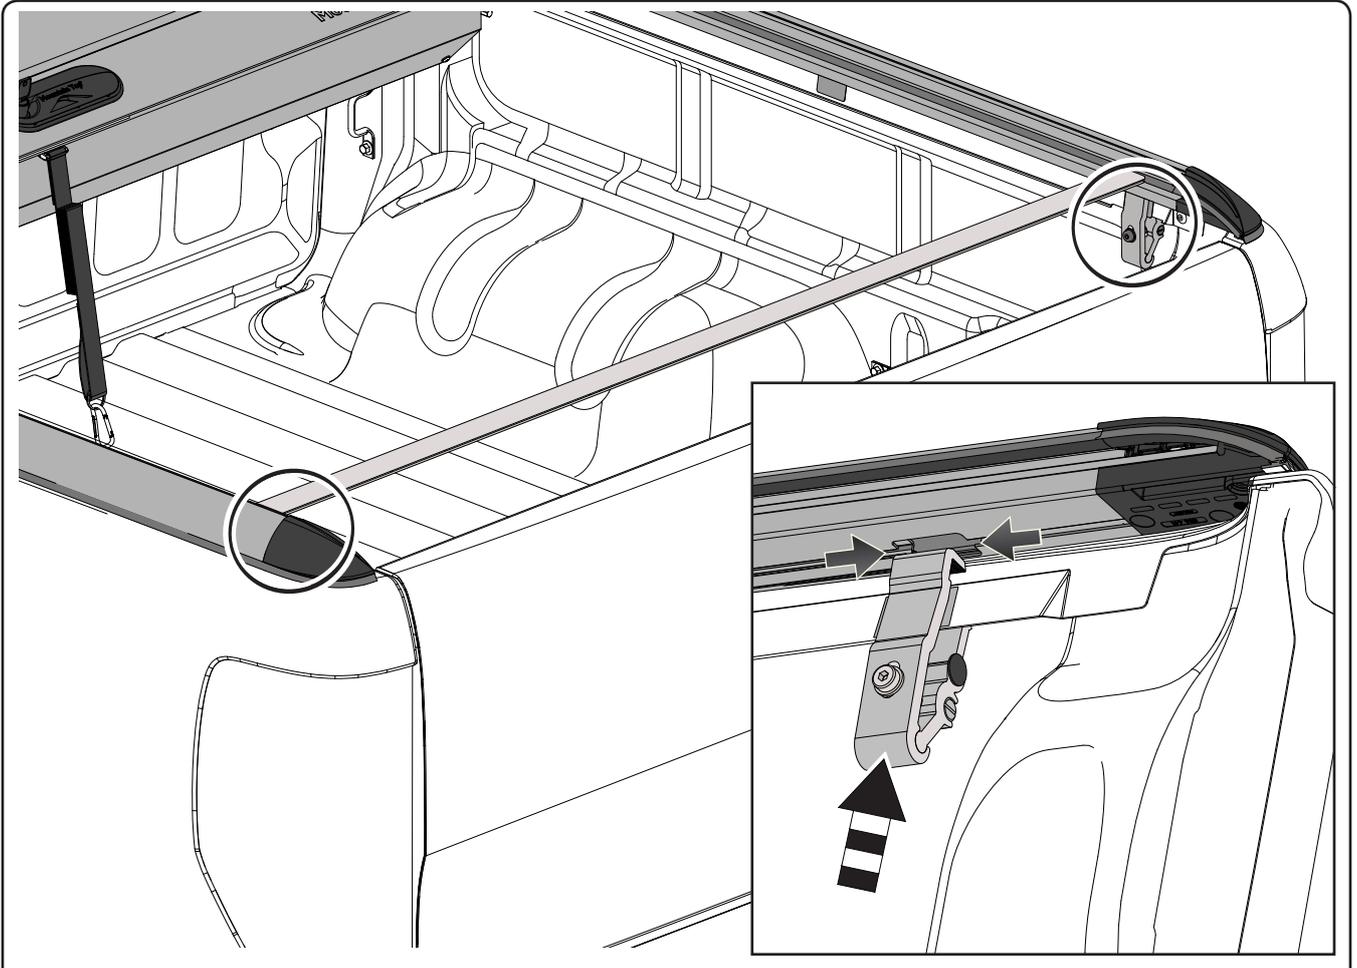


Mountain Top Roll
Installation Instructions

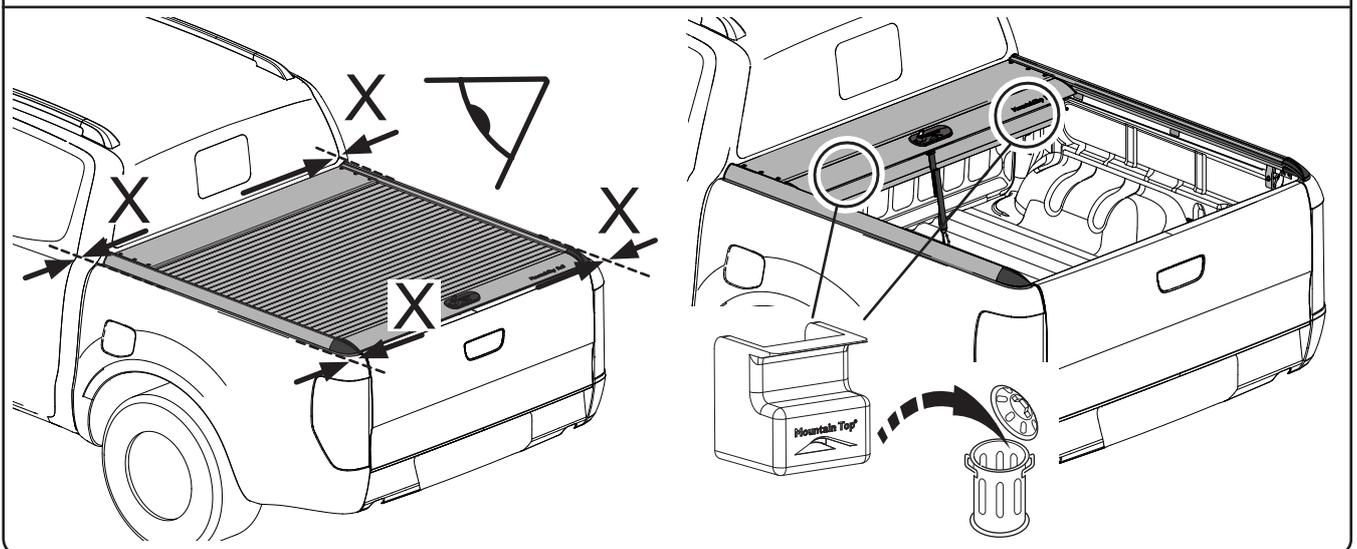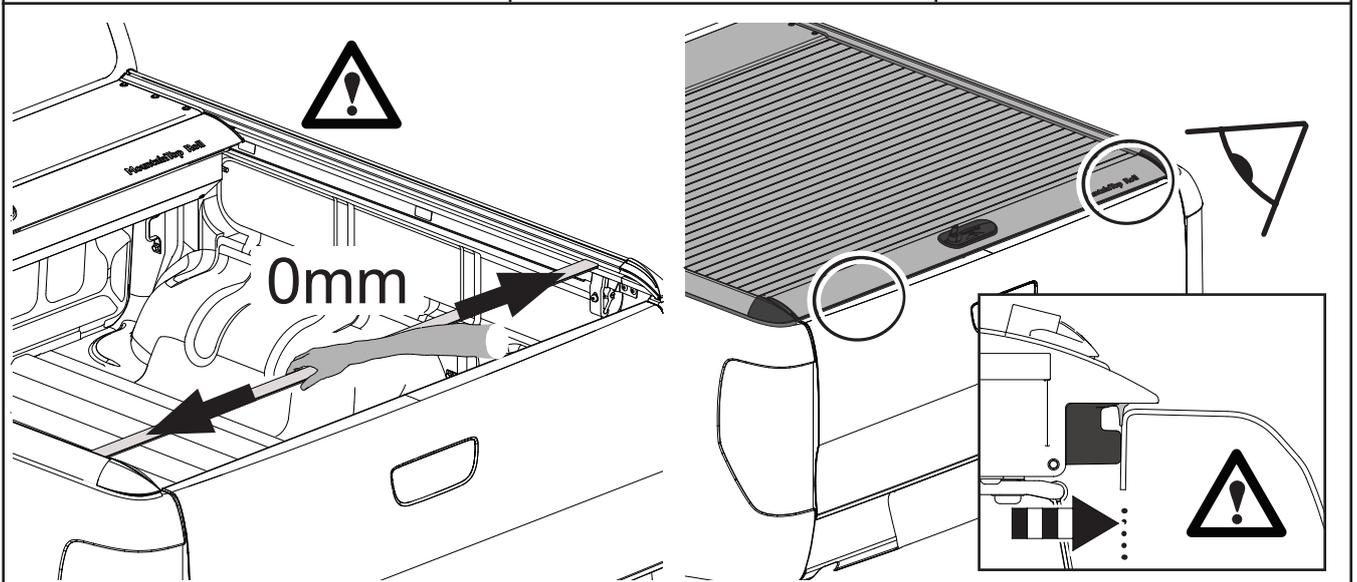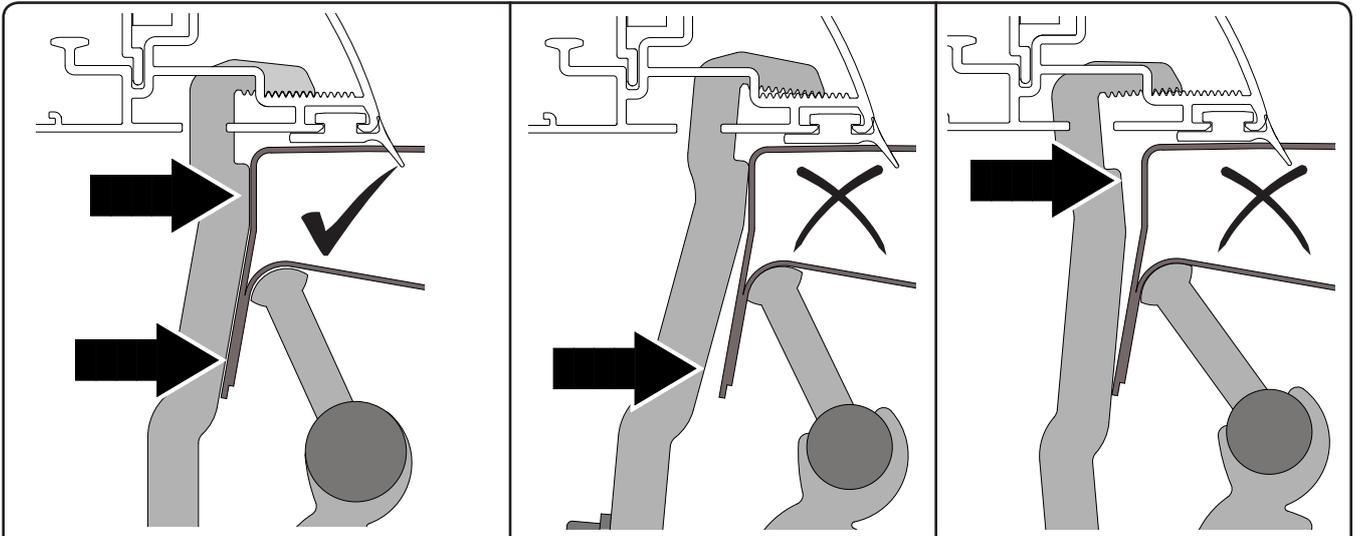



Mountain Top Roll
Installation Instructions

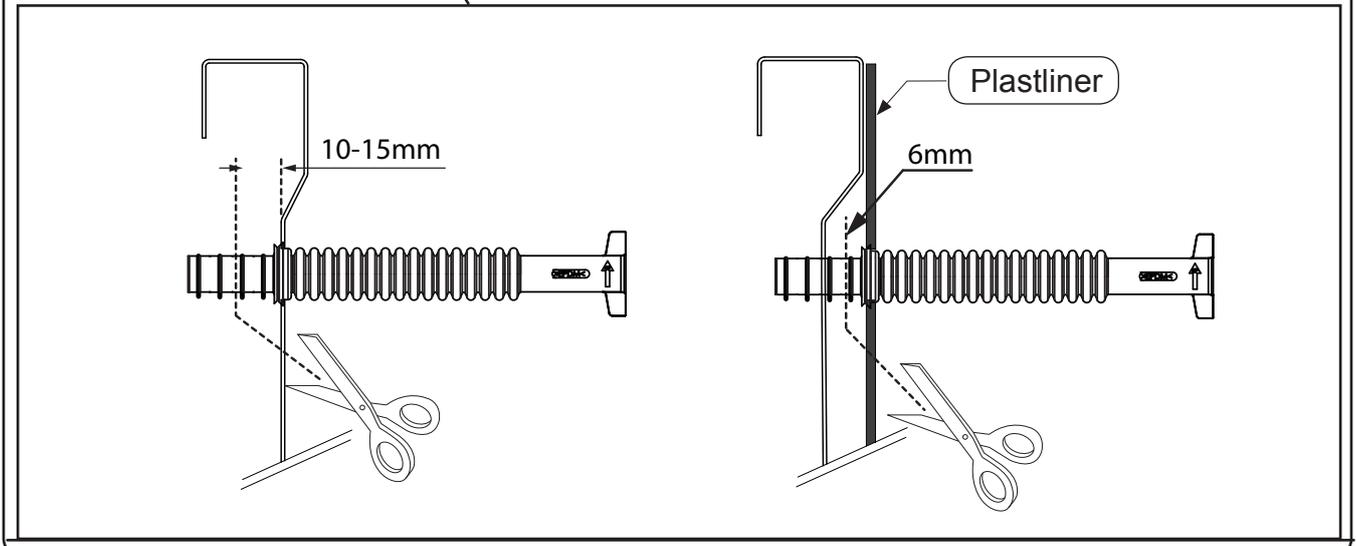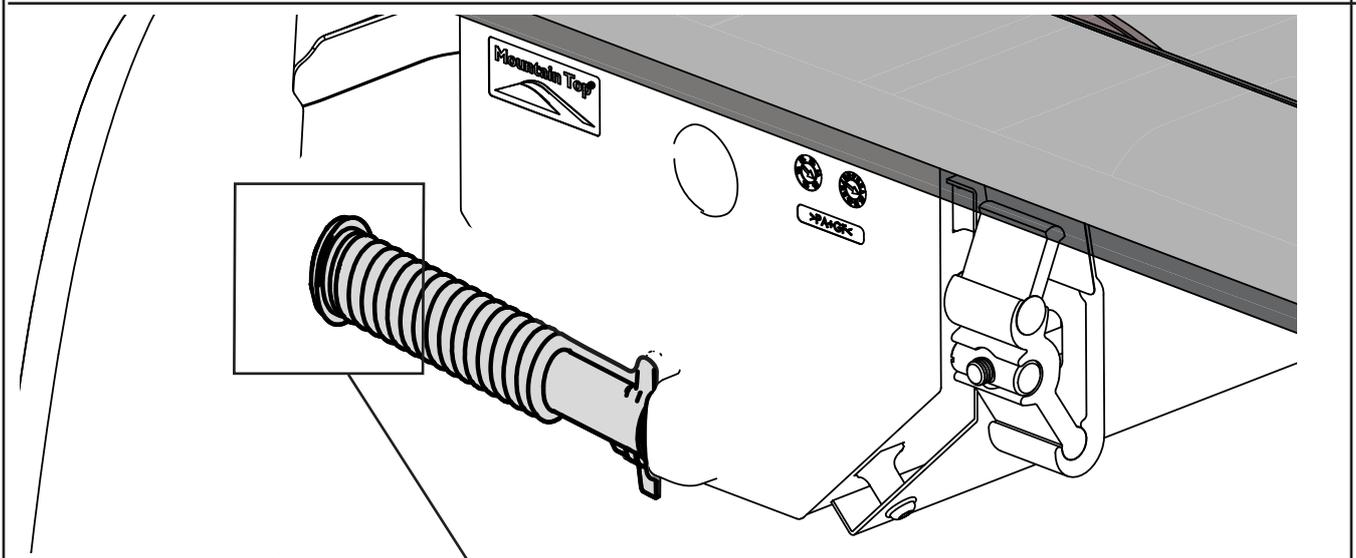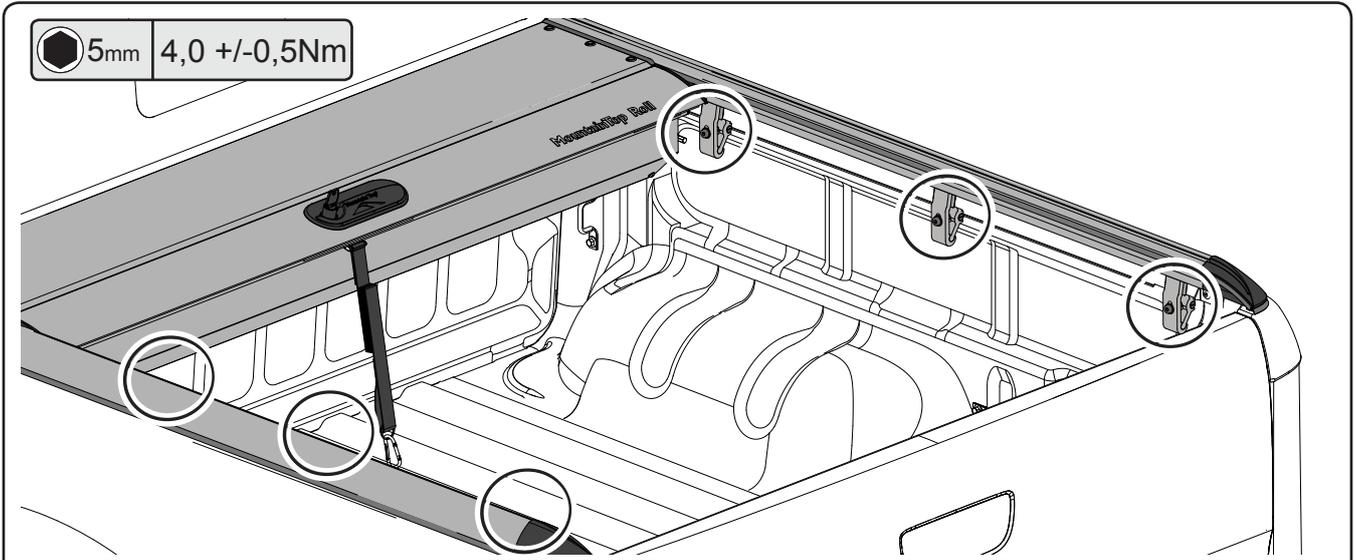






Mountain Top Roll
Installation Instructions

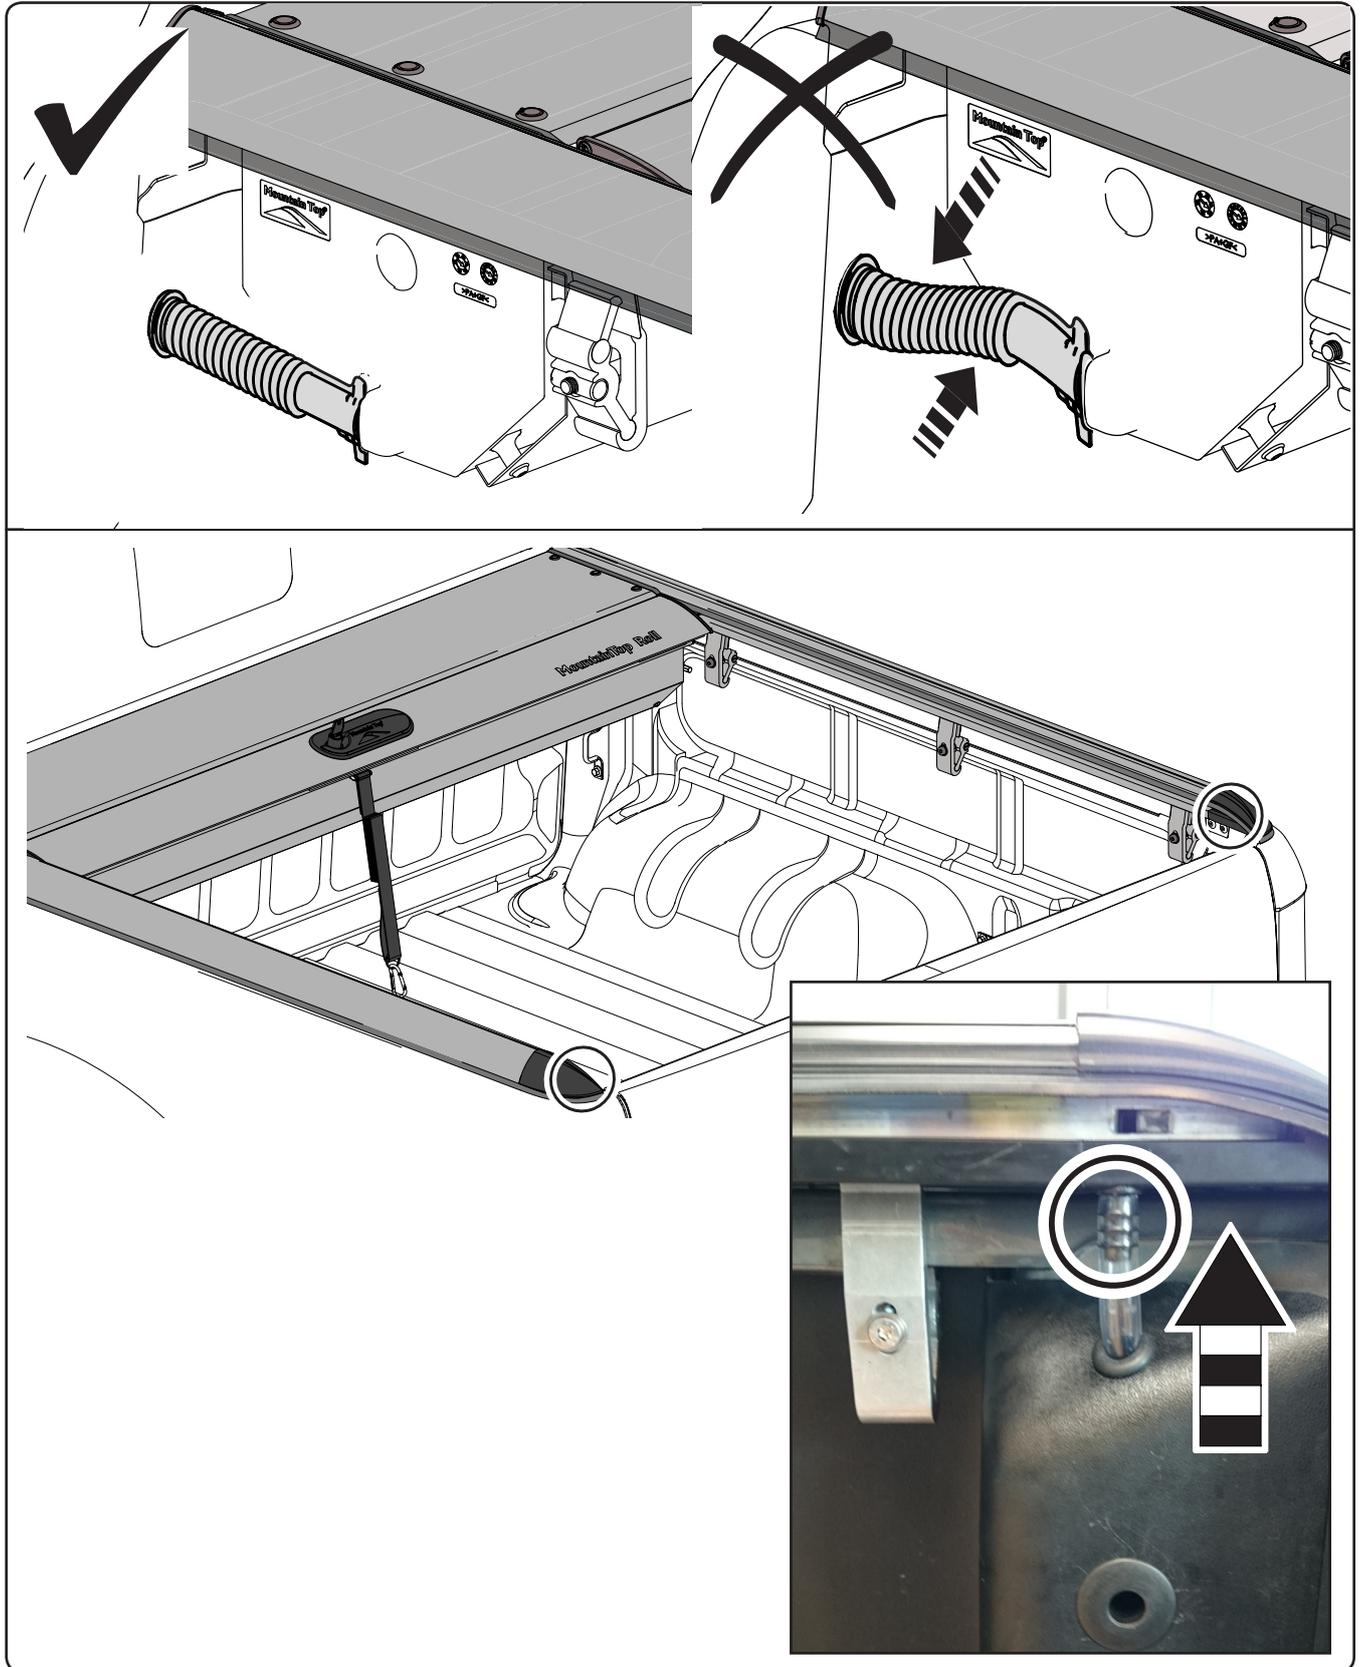

Mountain Top Roll
Installation Instructions

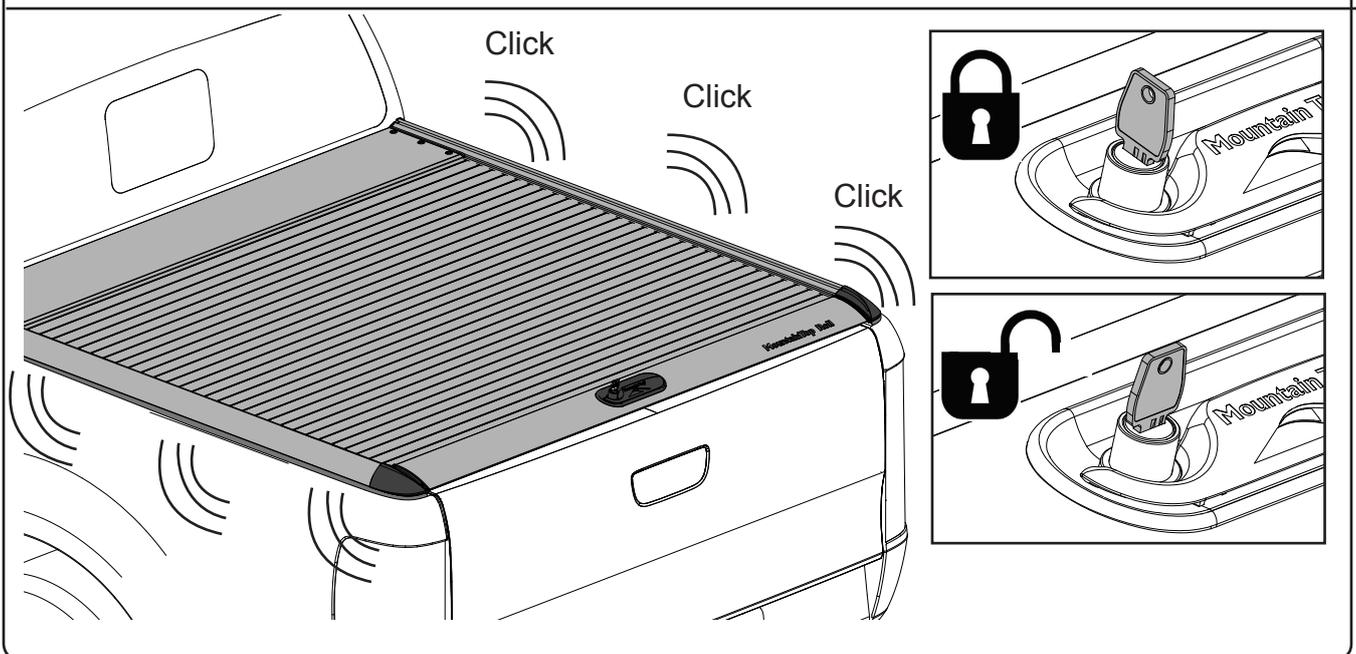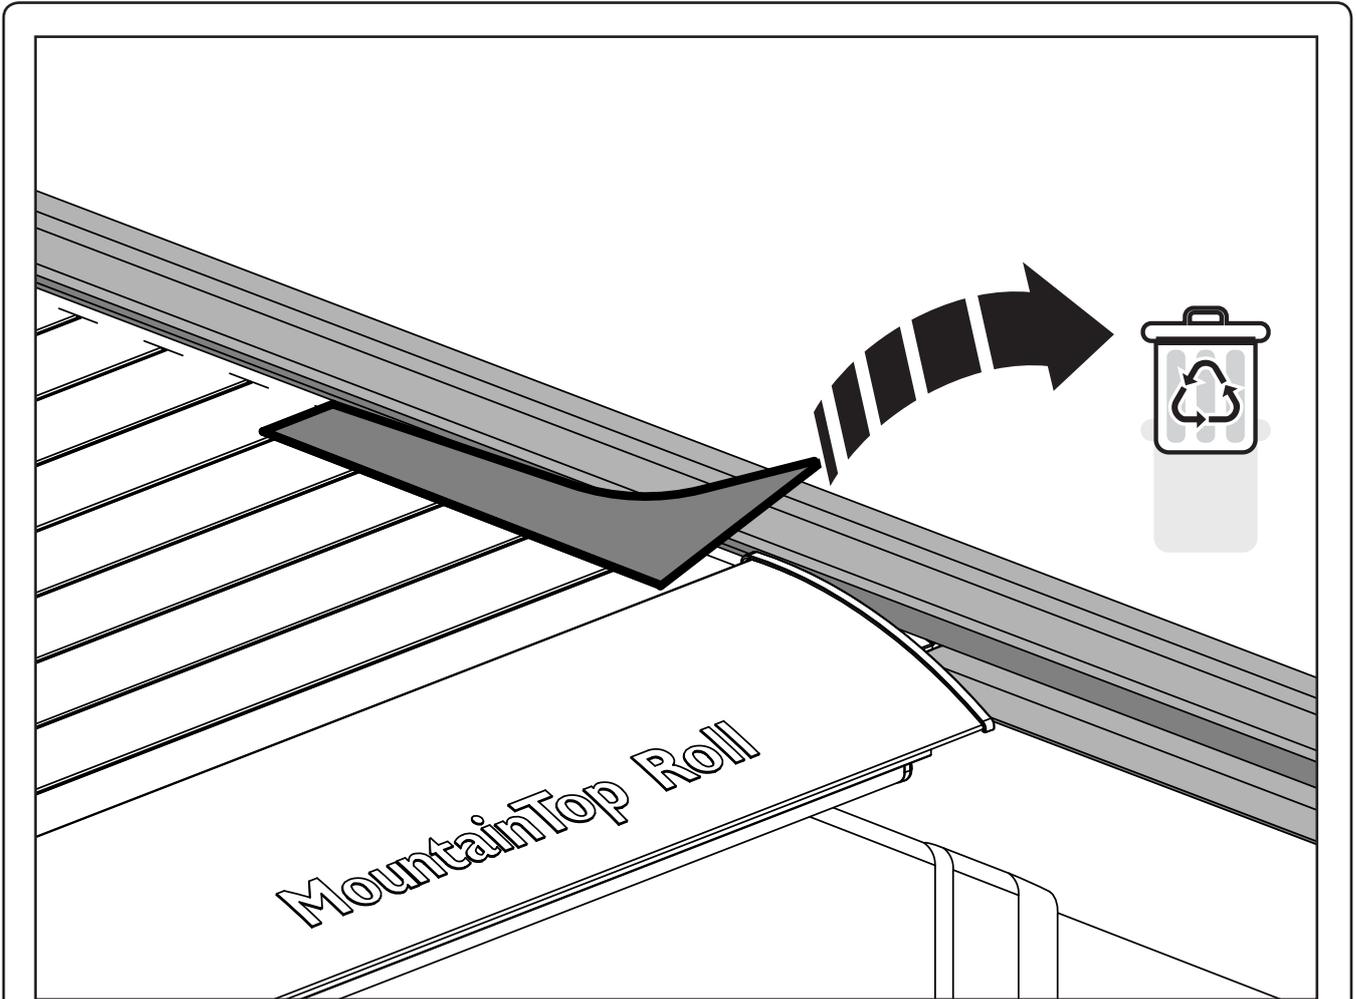

Mountain Top Roll
Installation Instructions

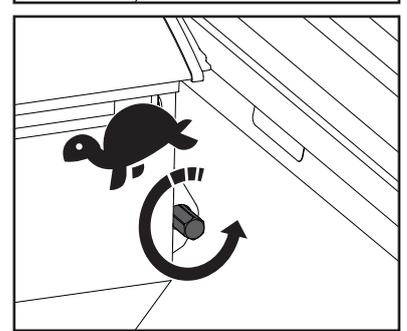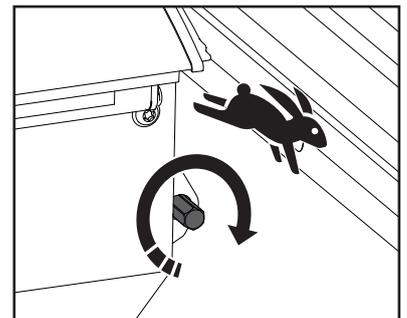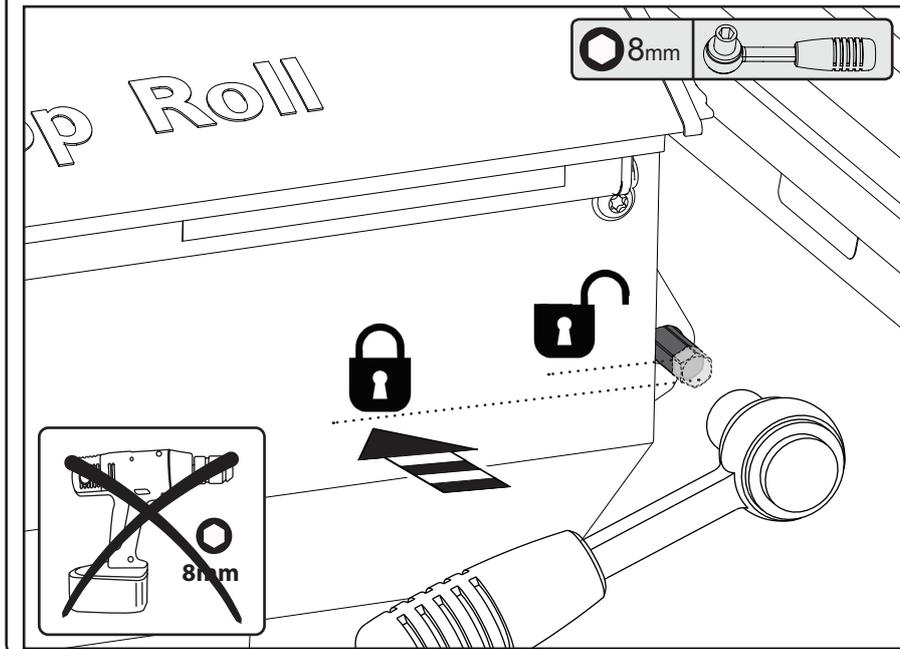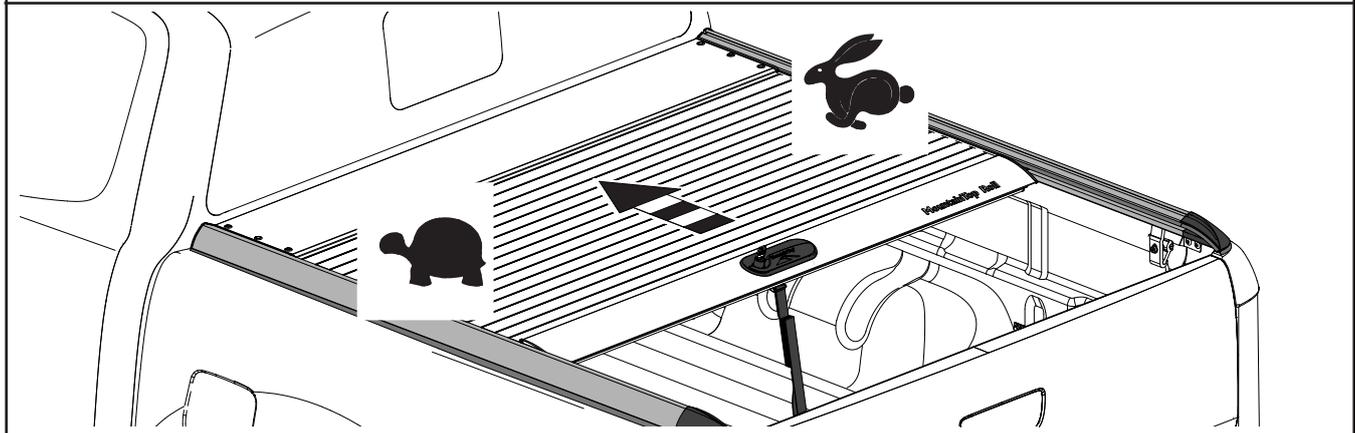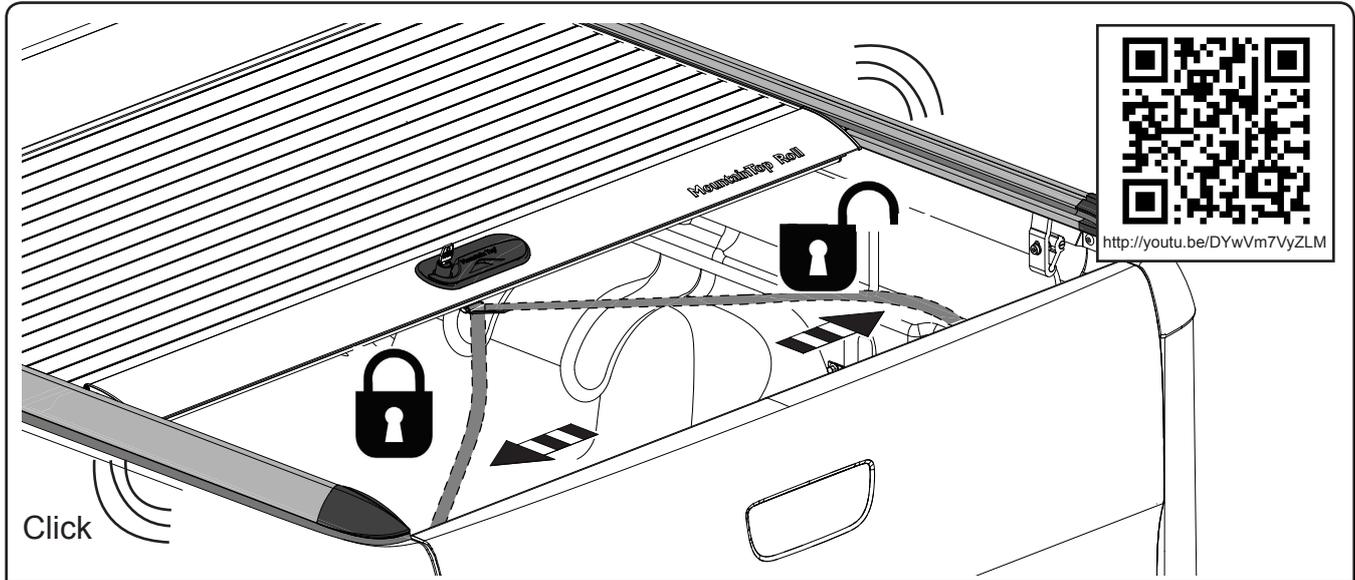

Mountain Top Roll
Installation Instructions

