







# Thule Rapid System Kit 1103

# > Instructions

TOYOTA Prius, 4-dr Sedan, 98-03 / \*01-03

\*North America

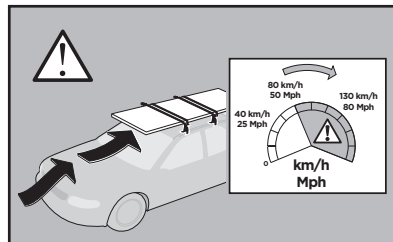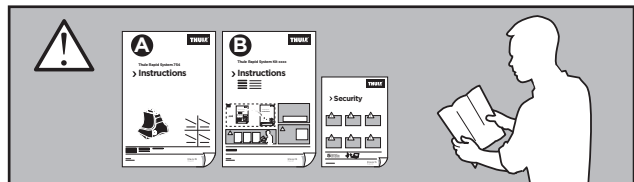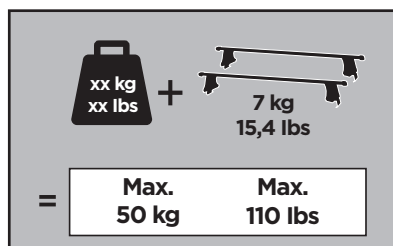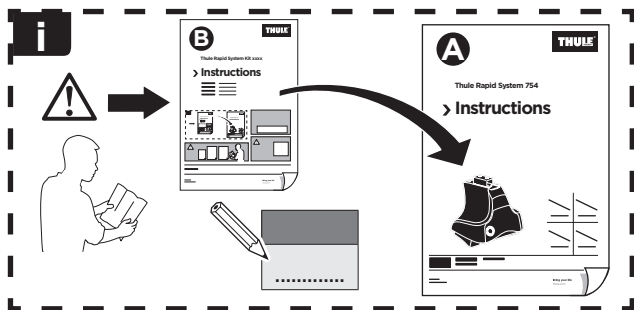

ISO 11154-E


141103

C.20130619  
519-1103-02

Bring your life  
thule.com



19 x4



227 x2



228 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
<b>TOYOTA Prius, 4-dr Sedan, 98-03 / *01-03</b>	<b>40</b>	<b>1051</b>	<b>41 <sup>3</sup>/<sub>8</sub></b>

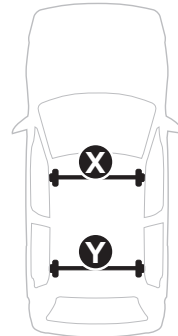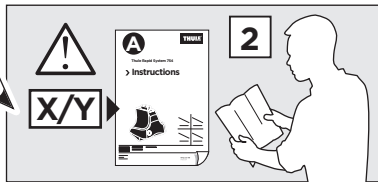
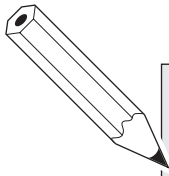


	Y (scale)	Y (mm)	Y (inch)
<b>TOYOTA Prius, 4-dr Sedan, 98-03 / *01-03</b>	<b>39</b>	<b>1041</b>	<b>41</b>

2

TOYOTA Prius, 4-dr Sedan, 98-03 / \*01-03

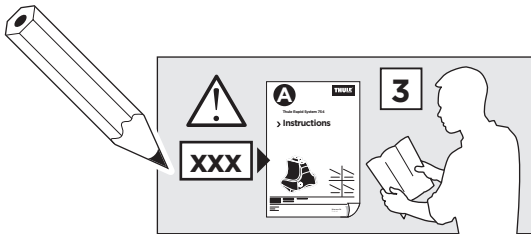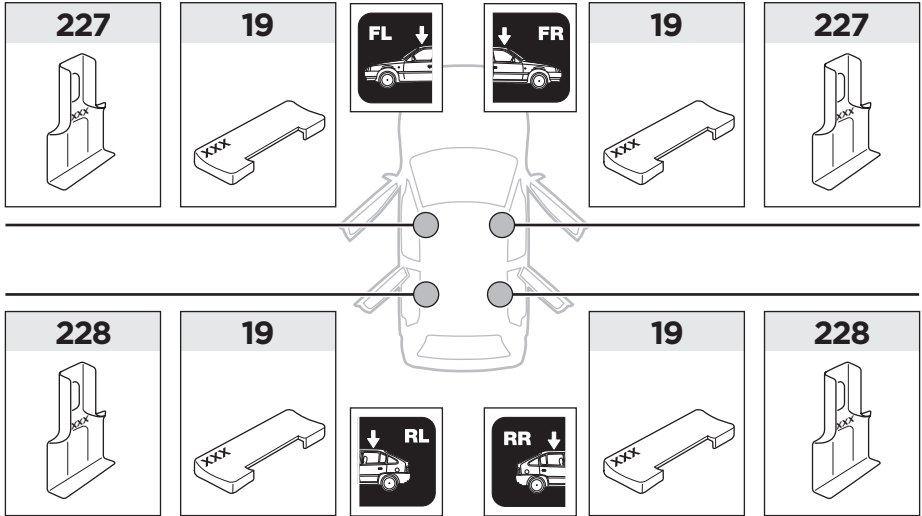

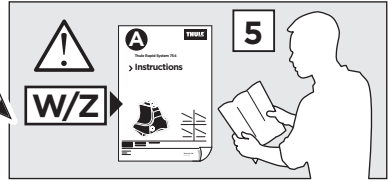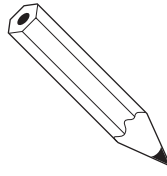**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>TOYOTA Prius, 4-dr Sedan, 98-03 / *01-03</b>	<b>260</b>	<b>700</b>	<b>10 1/4</b>	<b>27 1/2</b>

