
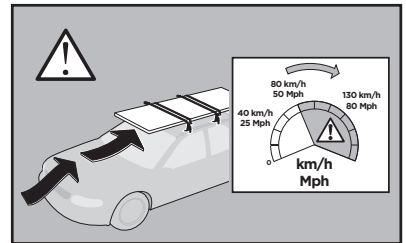
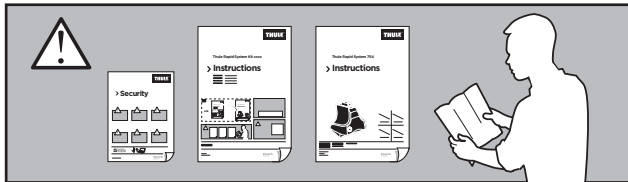
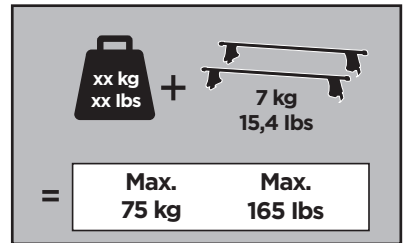


Thule Rapid System Kit 1132

> Instructions

ALFA ROMEO 166, 4-dr Sedan, 98-03, 04-07

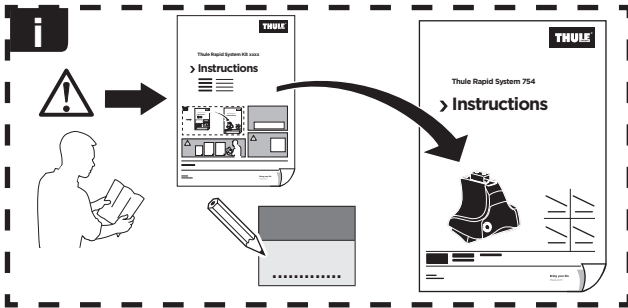

ISO 11154-E


141132

C.2013.0117
519-1132-01

Bring your life
thule.com




04 x4



150 x4





x1



x1

1



	X (scale)	X (mm)	X (inch)
ALFA ROMEO 166, 4-dr Sedan, 98-03, 04-07	30,5	956	37 ⁵ / ₈

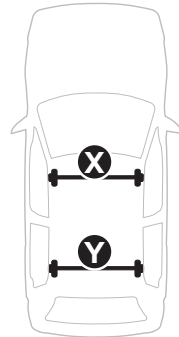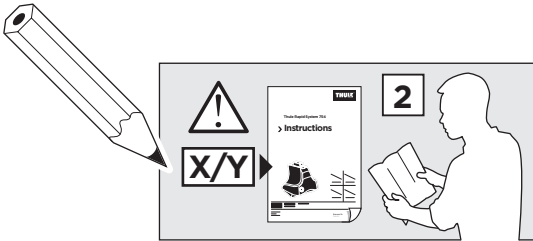



	Y (scale)	Y (mm)	Y (inch)
ALFA ROMEO 166, 4-dr Sedan, 98-03, 04-07	32,5	976	38 ³ / ₈

2

ALFA ROMEO 166, 4-dr Sedan, 98-03, 04-07

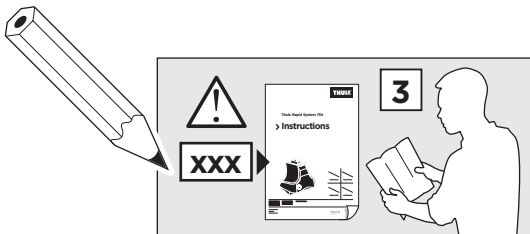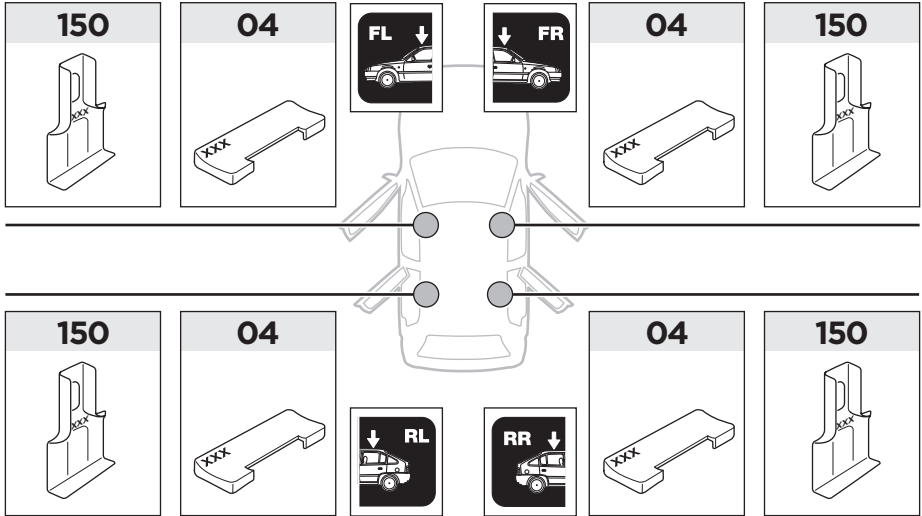

3

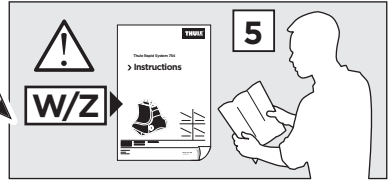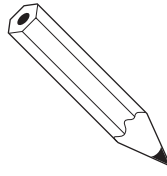

	W (mm)	Z (mm)	W (inch)	Z (inch)
ALFA ROMEO 166, 4-dr Sedan, 98-03, 04-07	200	650	7 ⁷/₈	25 ⁵/₈

